

INSTALLATION GUIDE
Duende Tables

December 12, 2018


TUOHY

Table of Contents

Base Attachment	1
Up Righting Table	2
Leg Wire Management	3
Work Surface Wire Management	4
Positioning Table into Place	5



BASE ATTACHMENT

1. Place table upside down - protect it from damage.
2. Align base with inserts in top.
3. Insert and hand thread M8-1.25 x 25mm Flat Head Socket Cap Screws.
 - ** Get all screws started before tightening all the way.
4. Once all screws are inserted and started, tighten all Flat Head Socket Cap Screws.
 - ** Be careful not to over tighten.

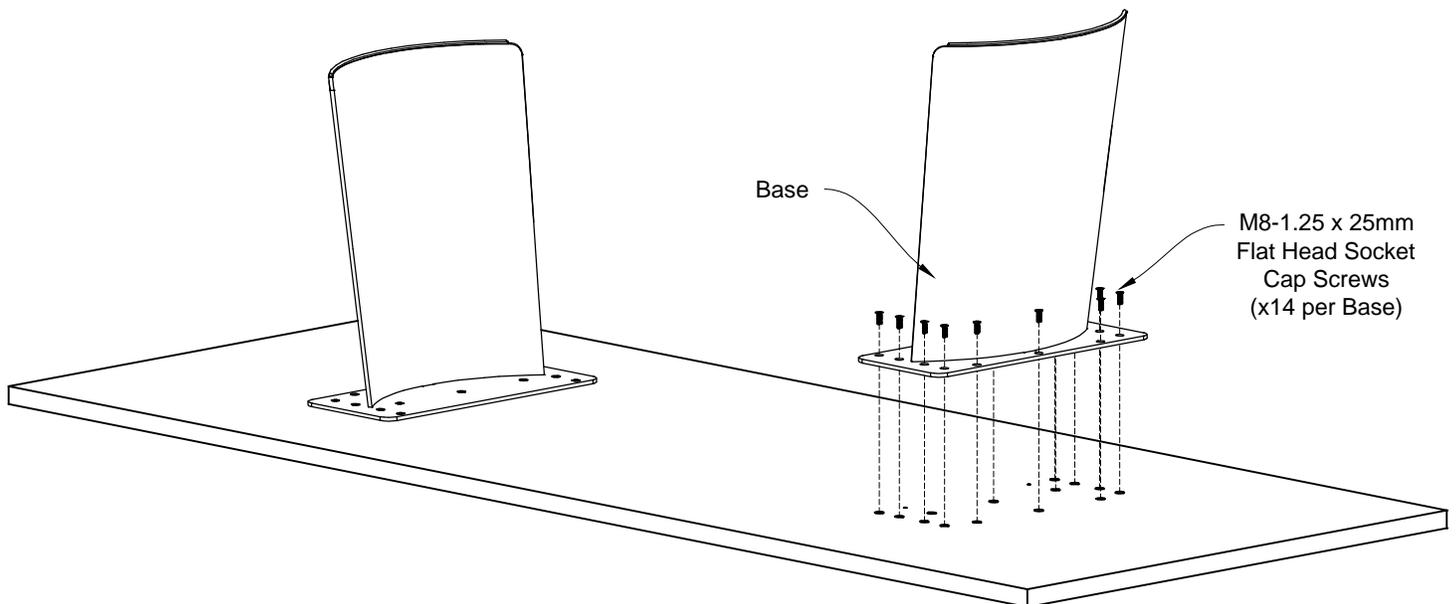



UP RIGHTING TABLE

1. Roll onto edge of bases. Protect table edge and bases from damage.
2. Lift table and rotate onto base.

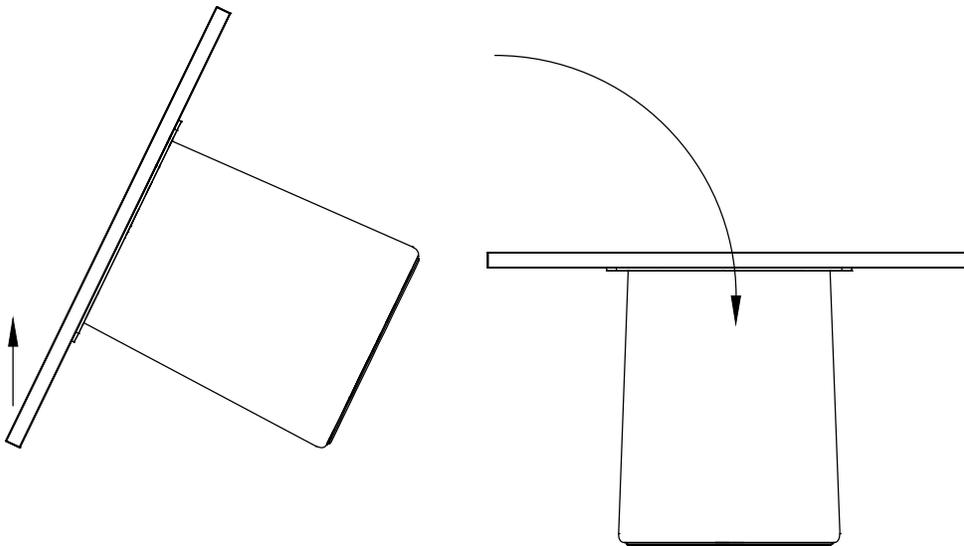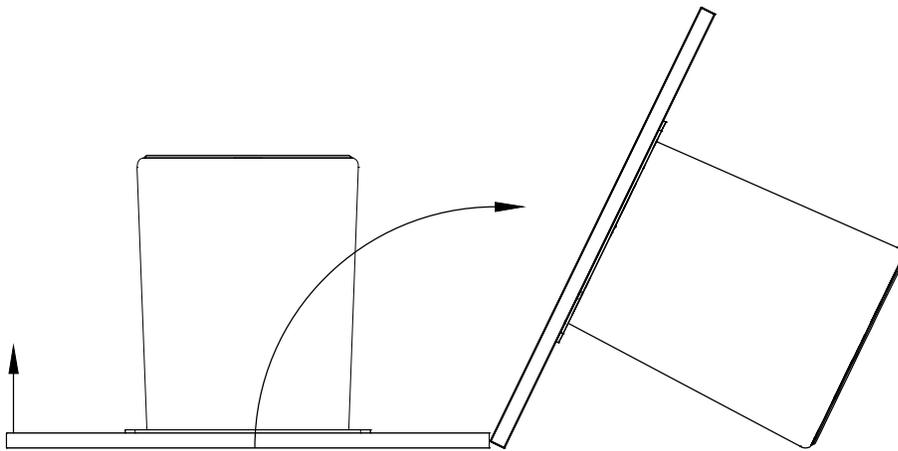


LEG WIRE MANAGEMENT

Align wire management cover so dual lock strips align and push to lock into place.

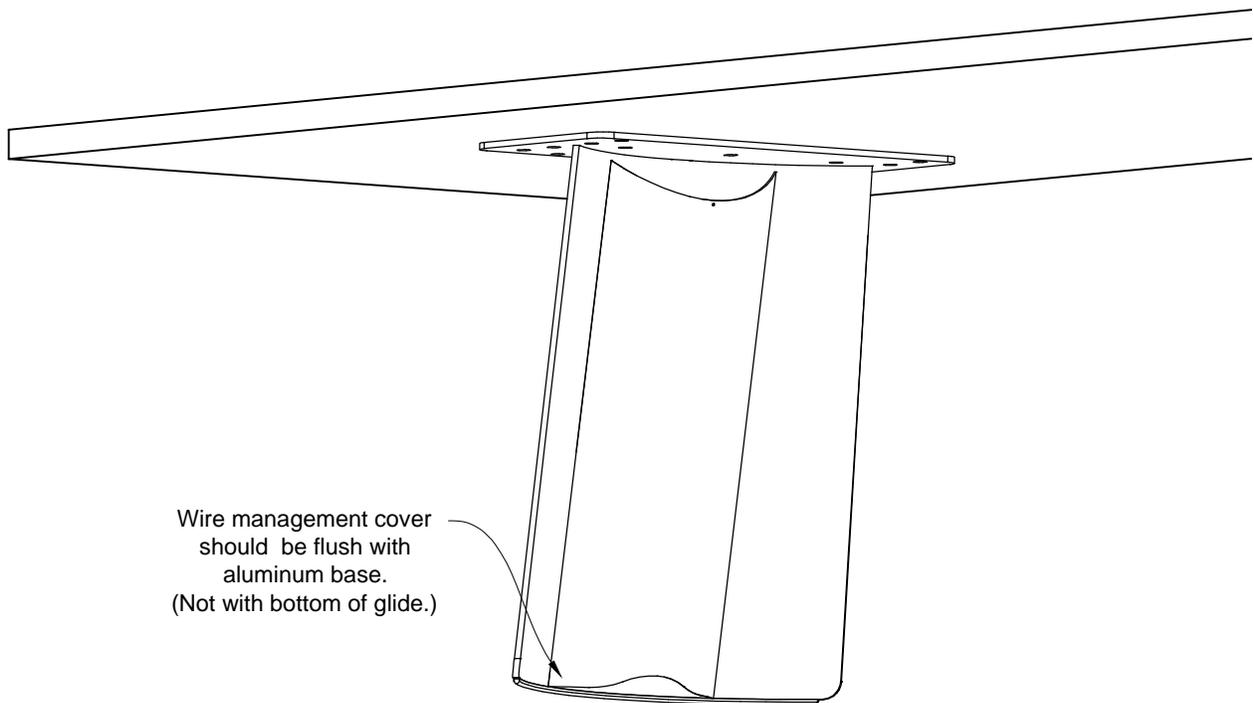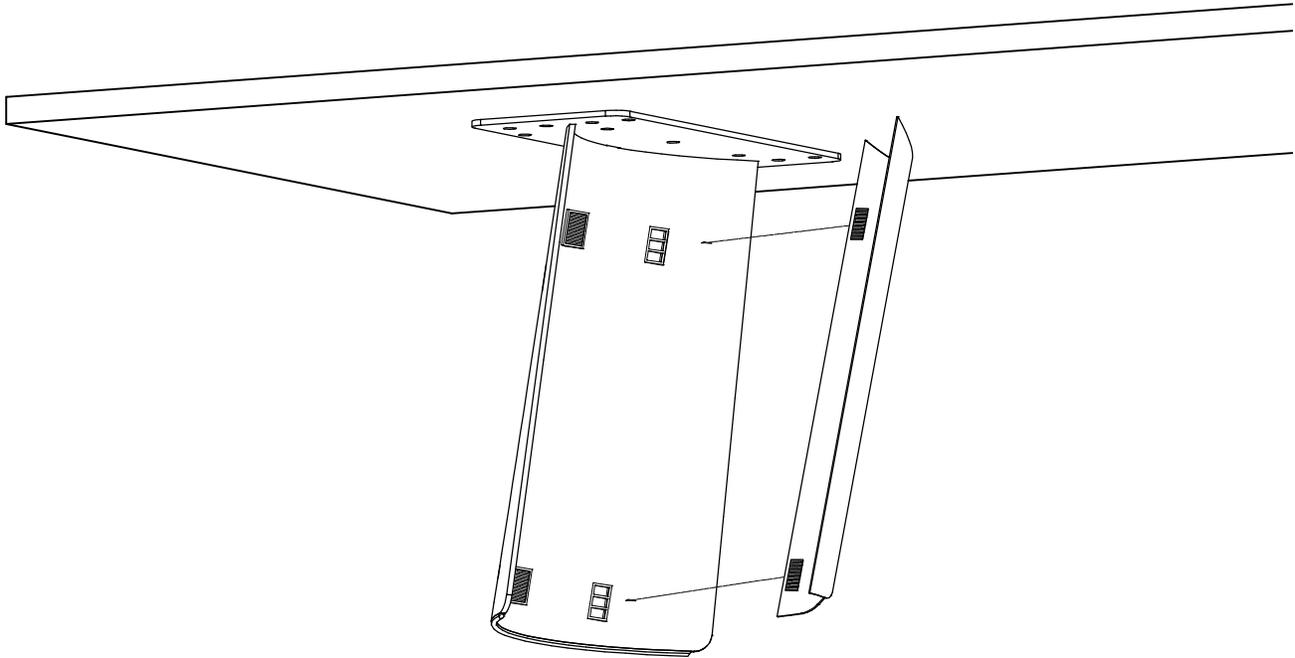


WORK SURFACE WIRE MANAGEMENT

1. Install wire carter mounting blocks to predrilled holes on underside of top.
2. Screw to top using #10 x 1" Pan Head Screws.

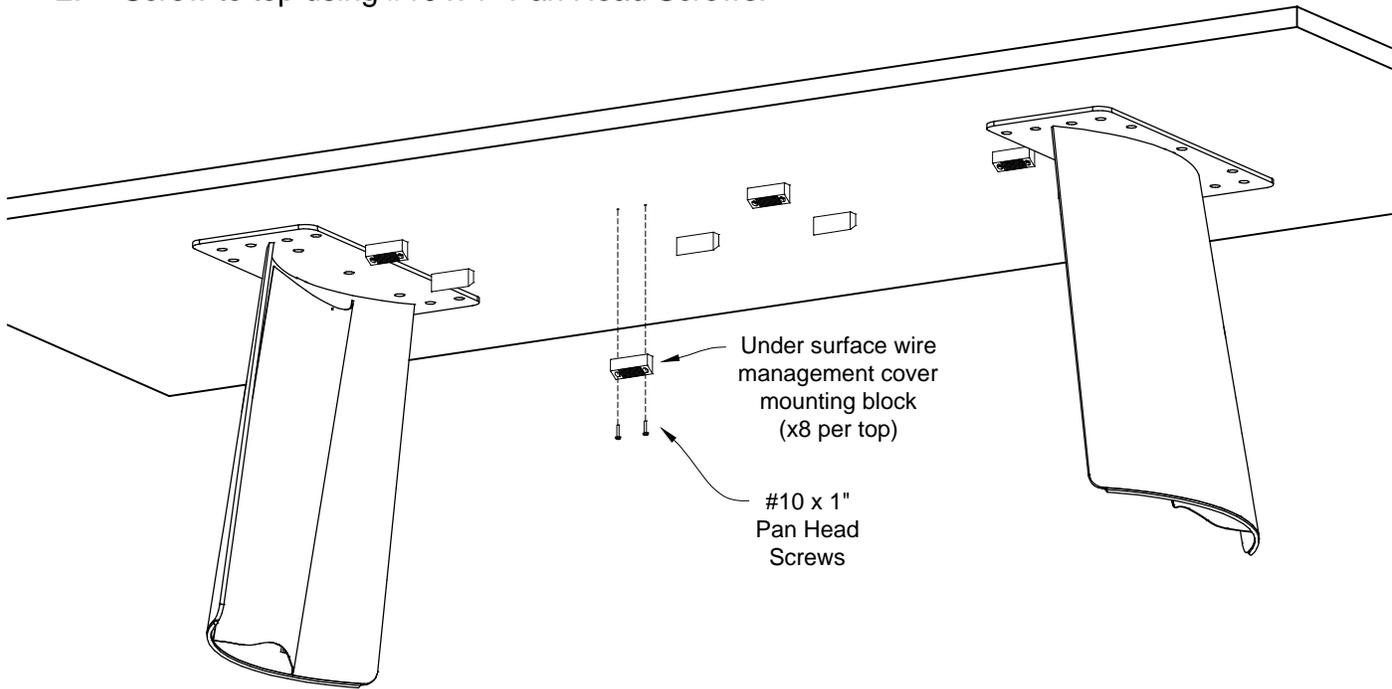

Align wire management cover so dual lock strips align and push to lock into place.
** Remove and realign as necessary to fit both wire management covers into place.

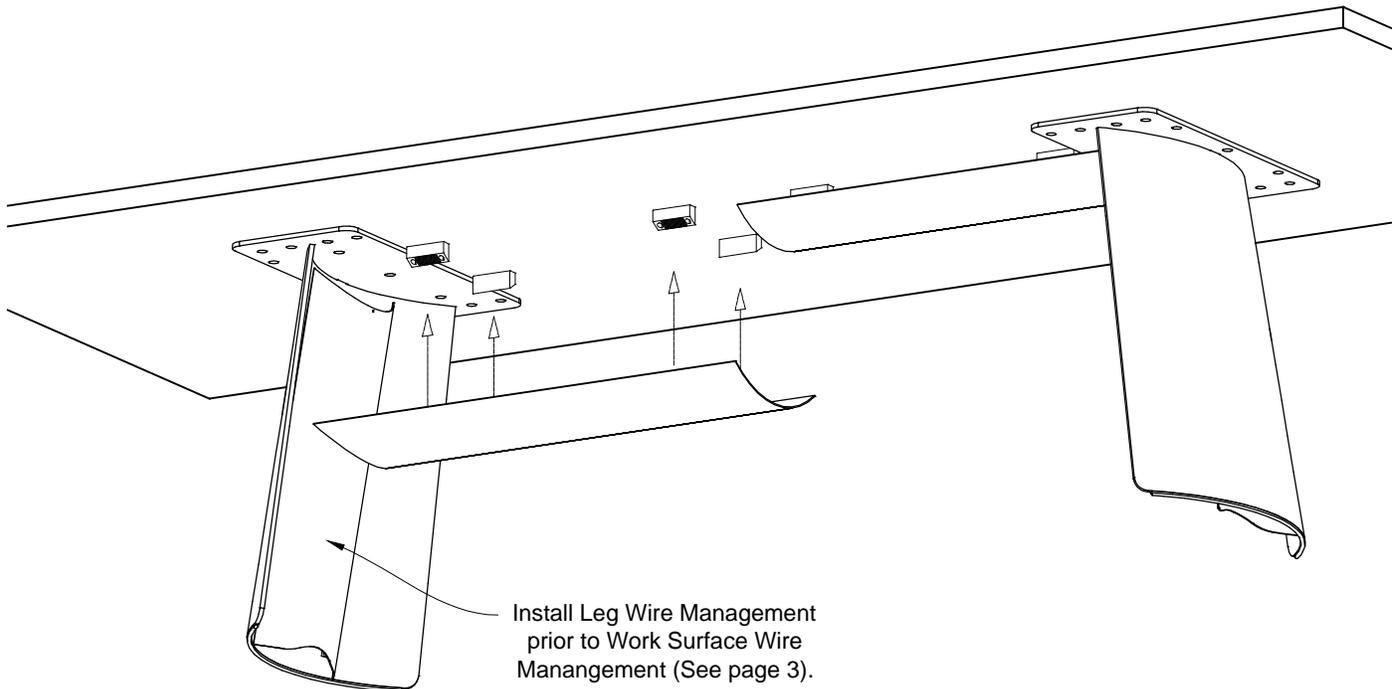

POSITIONING TABLE INTO PLACE

Pick up table to move or shift location - Do NOT slide table on floor.

