

Installation Instructions
Faraday Tables

Feburary 21, 2022

TUOHY



Table of Contents

Single-Piece Base and Top (Table Sizes 120" Wide and Less)

Set Frame in Place & Adjust Levelers.....	1
Remove Cover Panel.....	1
Attach Angle Irons.....	2
Set Plinth Inside Frame.....	2
Place Top and Attach to Frame.....	3
Center Plinth and Attach to Top.....	3
Remove Leveler Block.....	4
Replace Cover Panel.....	4

Multi-Piece Base and Top (Table Sizes Over 120" Wide)



Set Frame in Place & Adjust Levelers.....	5
Remove Cover Panel.....	5
Attach Angle Irons.....	6
Set Plinth Inside Frame.....	6
Join Base Sections.....	7
Place Top and Join Sections.....	8
Center Top and Attach to Frame.....	8
Center Plinth and Attach to Top.....	9
Remove Leveler Blocks.....	10
Replace Cover Panels.....	10

SINGLE-PIECE BASE AND TOP (TABLE SIZES 120" WIDE AND LESS)

TUOHY




SET METAL BASE FRAME IN PLACE & ADJUST LEVELERS

** Adjust the round mounting plates to be level with each other.

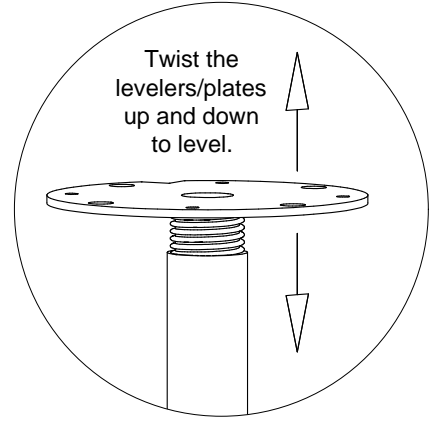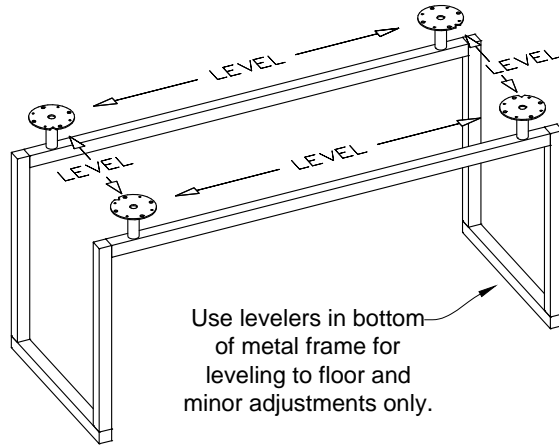

REMOVE COVER PANEL FROM PLINTH BASE

** Lift off cover panel from plinth base by unlocking from button fixes. (See Detail A)

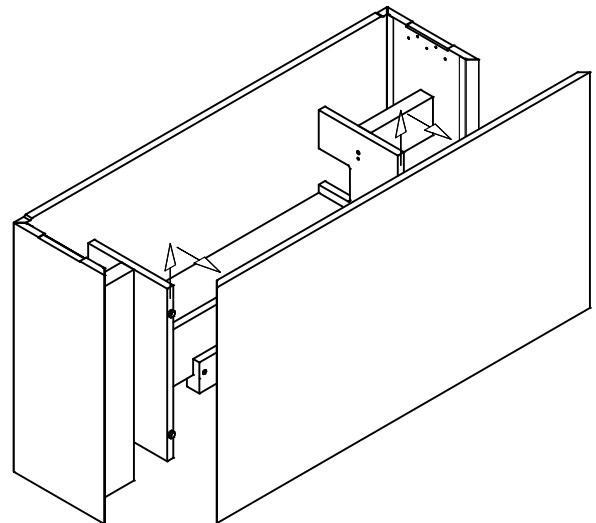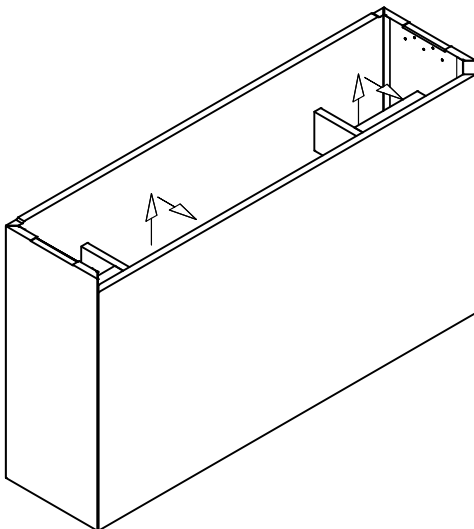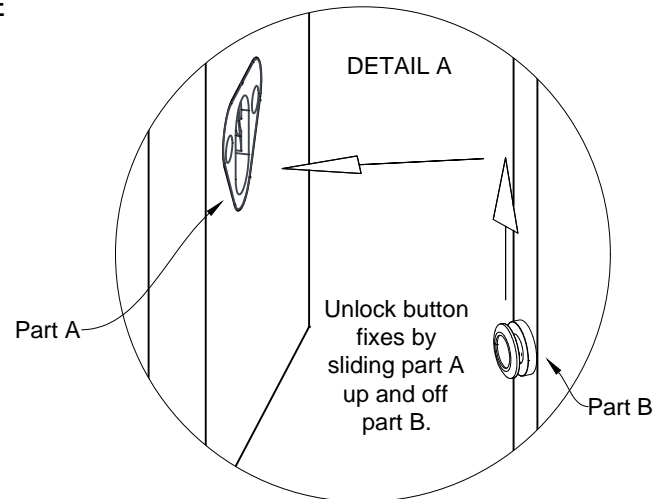


SINGLE-PIECE BASE AND TOP (TABLE SIZES 120" WIDE AND LESS)


TUOHY

ATTACH ANGLE IRONS TO PLINTH BASE

- ** Attach 5" angle irons to each short side of plinth base using #10 x 3/4" Pan Head screws.
- ** Attach 10" angle iron to center back of plinth base using #9 x 5/8" Pan Head screws.

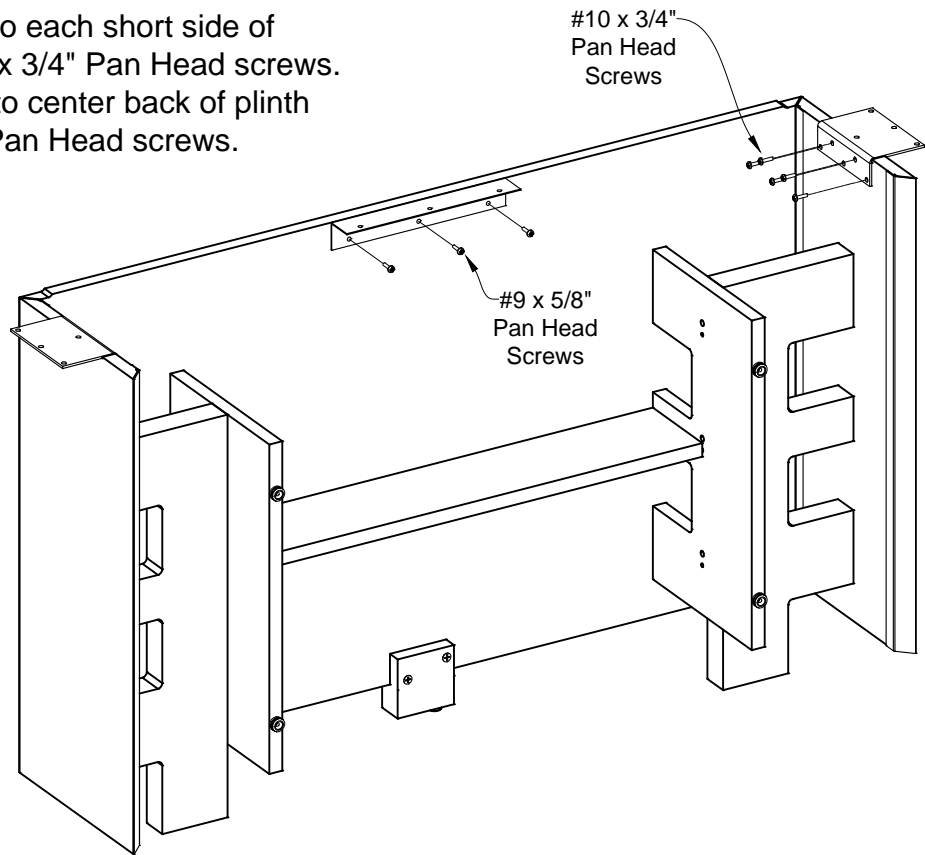

SET PLINTH BASE IN PLACE INSIDE OF METAL BASE FRAME

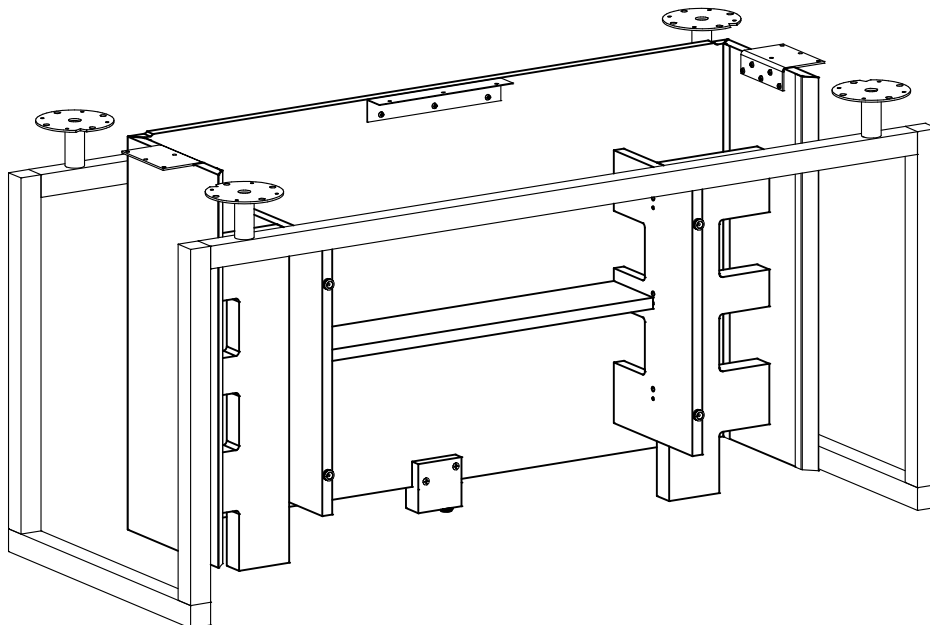


SINGLE-PIECE BASE AND TOP (TABLE SIZES 120" WIDE AND LESS)

TUOHY

PLACE TOP AND ATTACH TO FRAME


- ** Center top on frame.
- ** Ensure top is level. Make final adjustments to post levelers as needed to ensure top is level.
- ** Attach round mounting plates on metal base frame to top.
 - ~ If inserts were used in top use M8-1.125 x 25 button head socket cap screws.
 - ~ If no inserts were used in top use #10 x 1" pan head screws.

IMPORTANT: Ensure top is level before screwing frame to top.

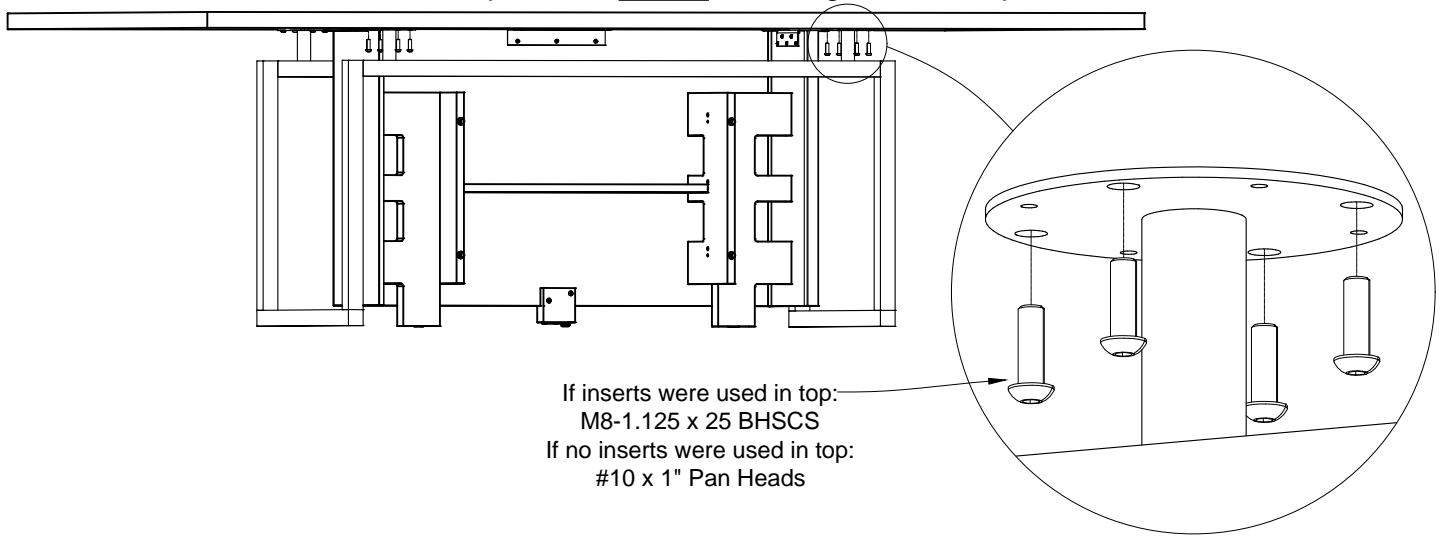

CENTER PLINTH & ATTACH TO TOP


- ** Level up plinth to top with levelers under plinth.
- ** Center plinth in frame.
- ** Attach 5" angle irons to top using #10 x 1" Pan Head Screws
- ** Attach 10" angle iron to top using #9 x 5/8" Pan Head Screws

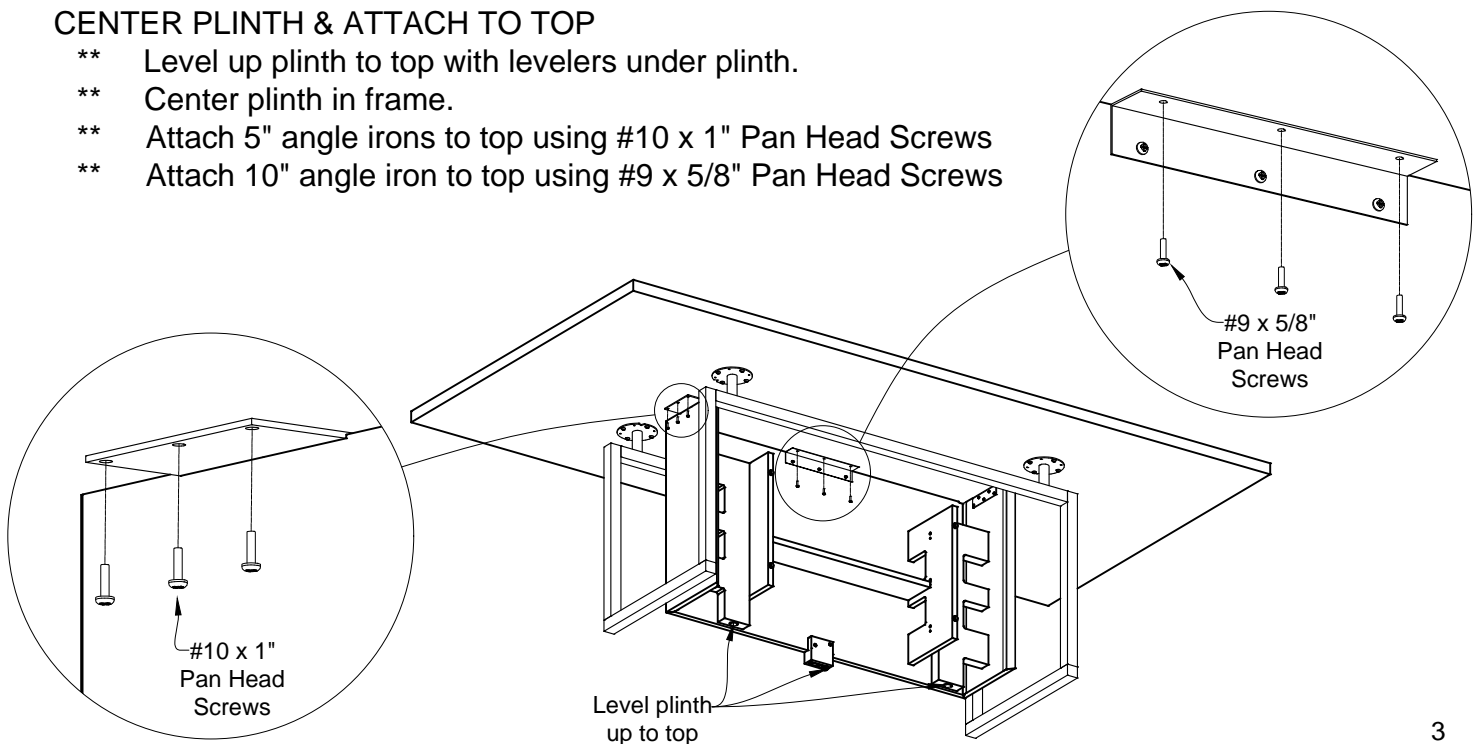

SINGLE-PIECE BASE AND TOP (TABLE SIZES 120" WIDE AND LESS)



TUOHY

REMOVE LEVELER BLOCK

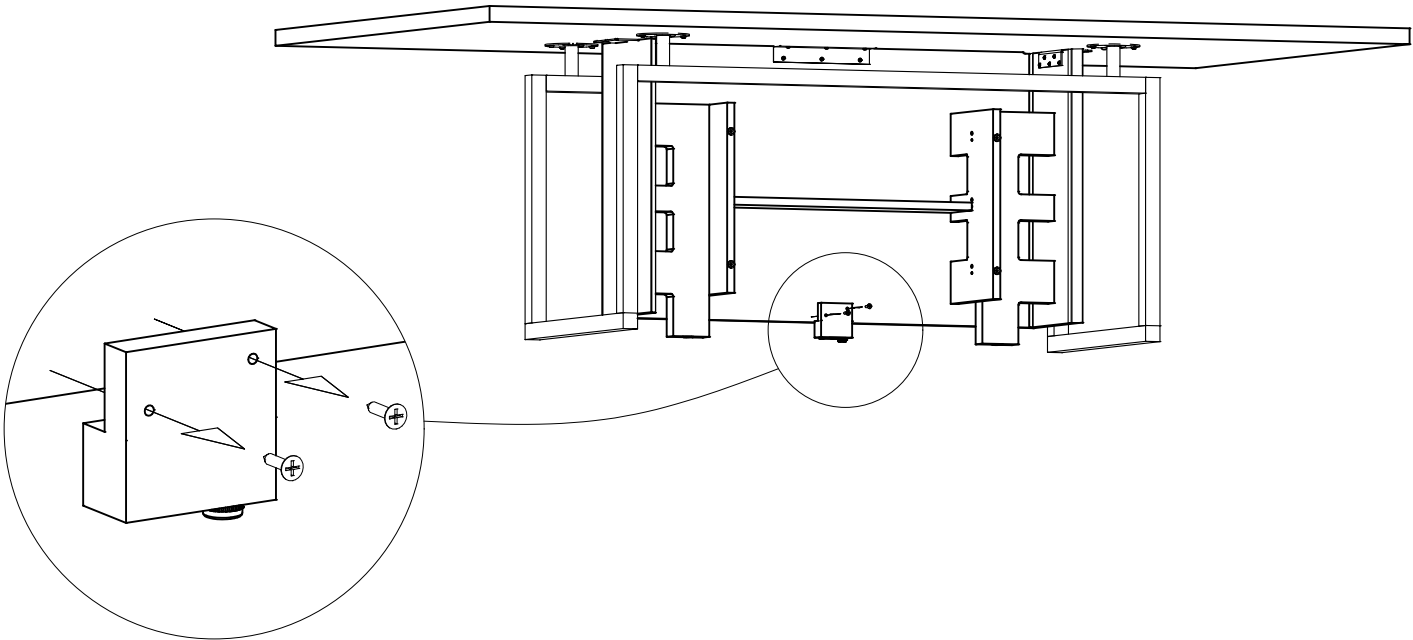

REPLACE COVER PANEL

** Re-Attach cover panel by bringing panel in towards base and locking down into place aligning with button fixes. (See Detail B)

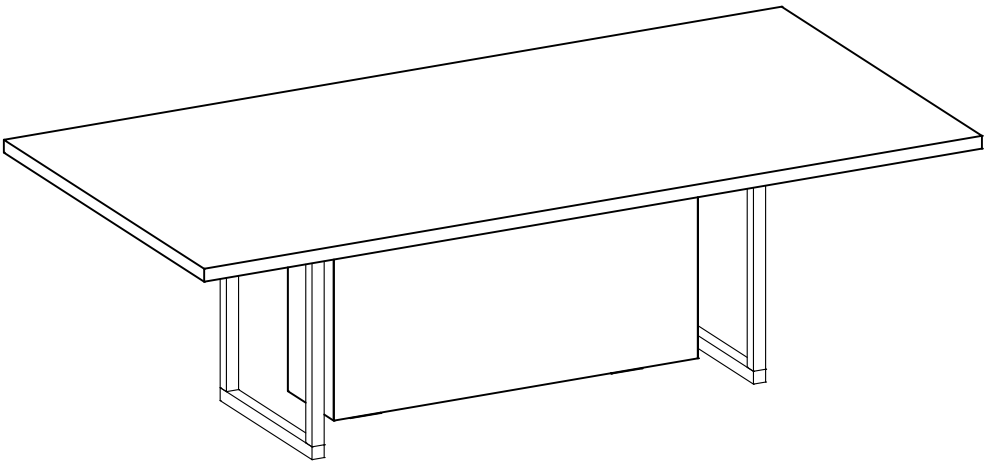
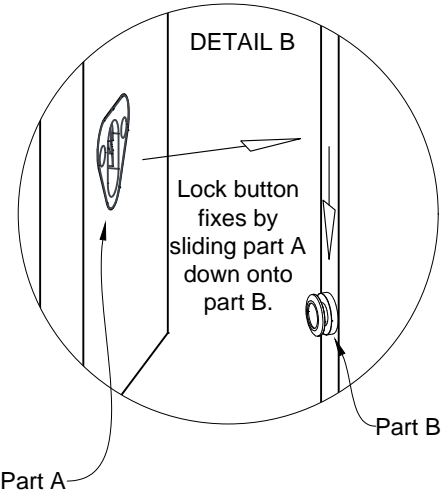


MULTI-PIECE BASE AND TOP (TABLE SIZES OVER 120")

TUOHY




SET METAL BASE FRAMES IN PLACE & ADJUST LEVELERS

** Adjust the round mounting plates to be level with each other.

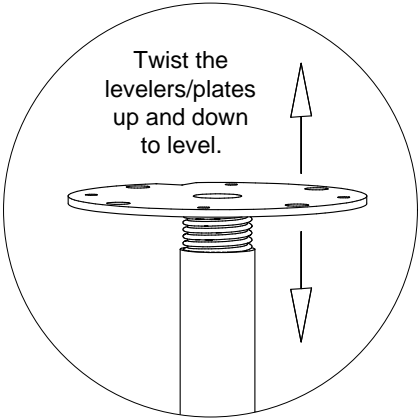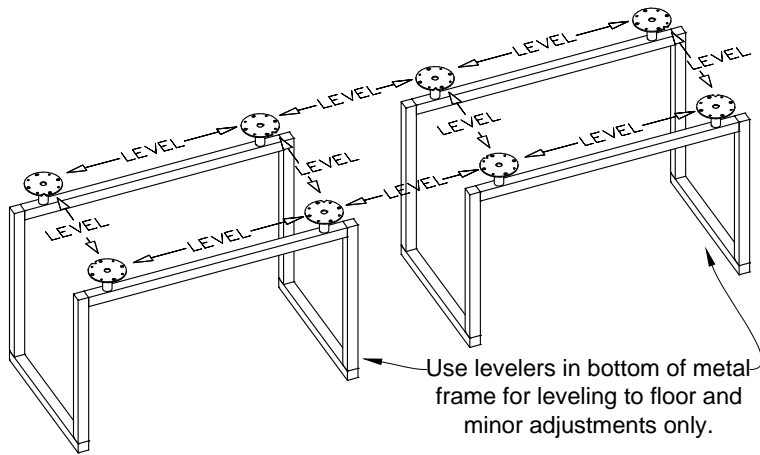

REMOVE COVER PANELS FROM PLINTH BASE

** Lift off cover panels from plinth base by unlocking from button fixes. (See Detail A)

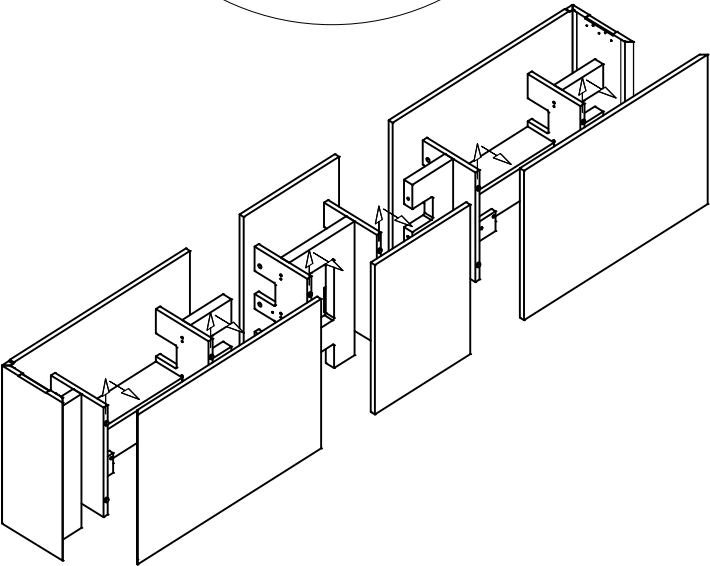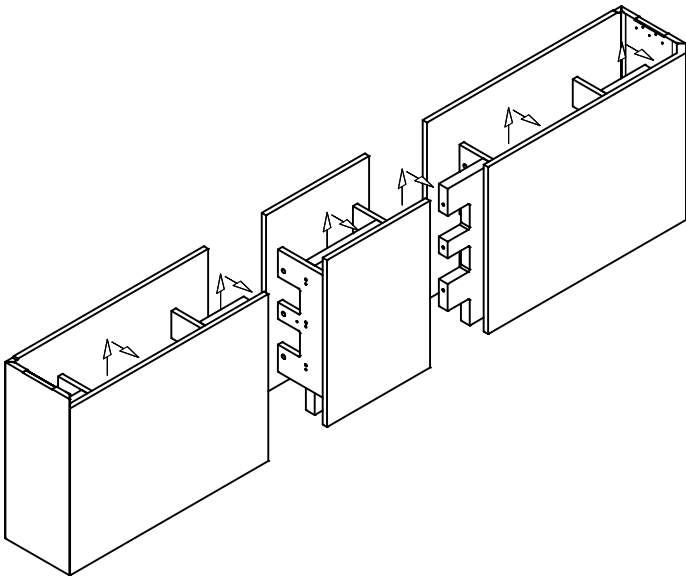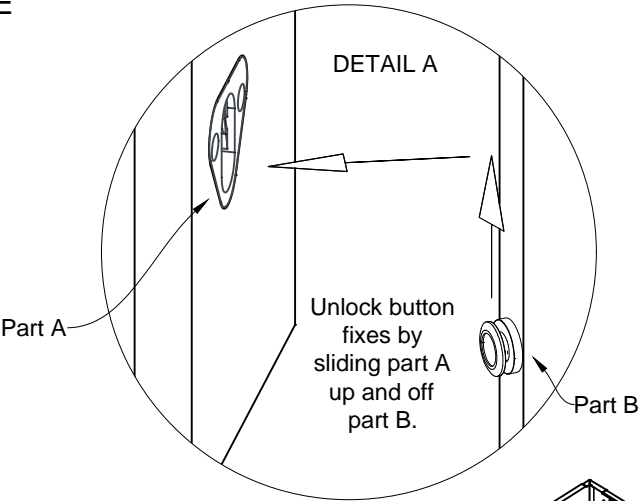


MULTI-PIECE BASE AND TOP (TABLE SIZES OVER 120")

TUOHY


ATTACH ANGLE IRONS TO PLINTH

- ** Attach 5" angle irons to each short side of plinth base using #10 x 3/4" Pan Head screws.
- ** Attach 10" angle irons to center back of plinth section using #9 x 5/8" Pan Head screws.

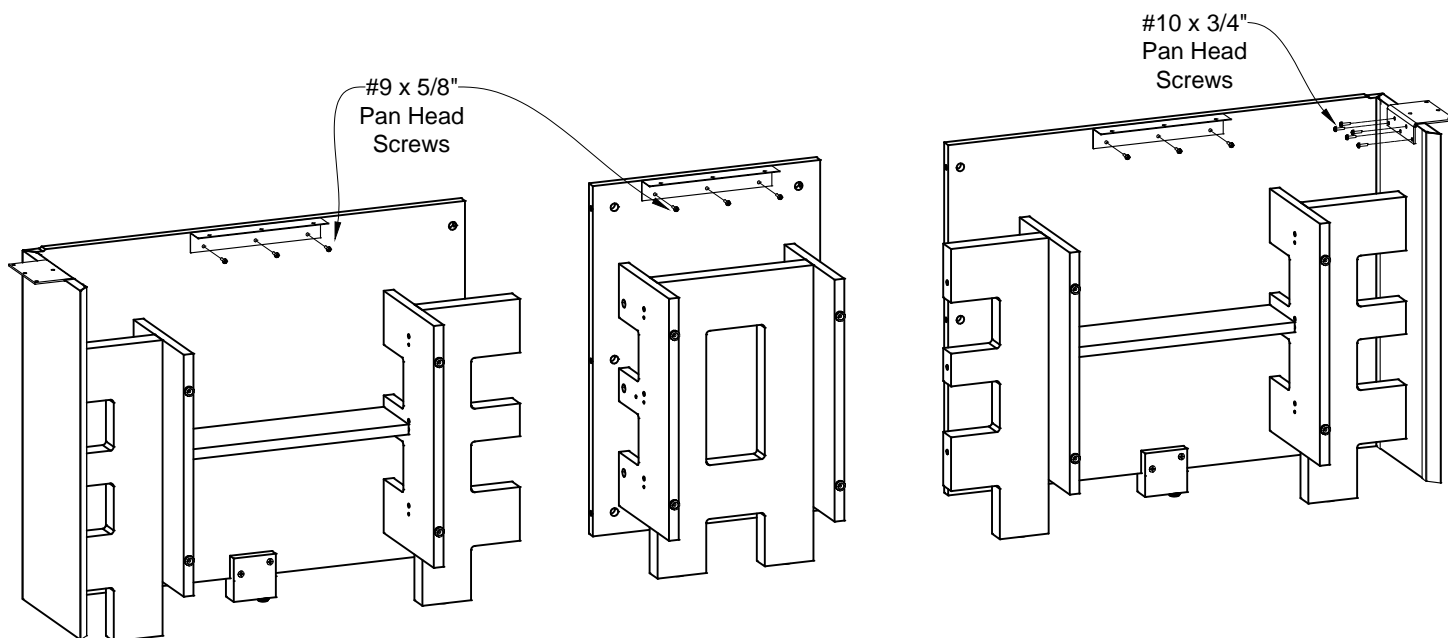

SET EACH PLINTH SECTION INSIDE OF METAL BASE FRAME

- ** Set outer plinth section inside of frame.
- ** Set middle plinth section inside of frame.
- ** Set last plinth section inside of frame.



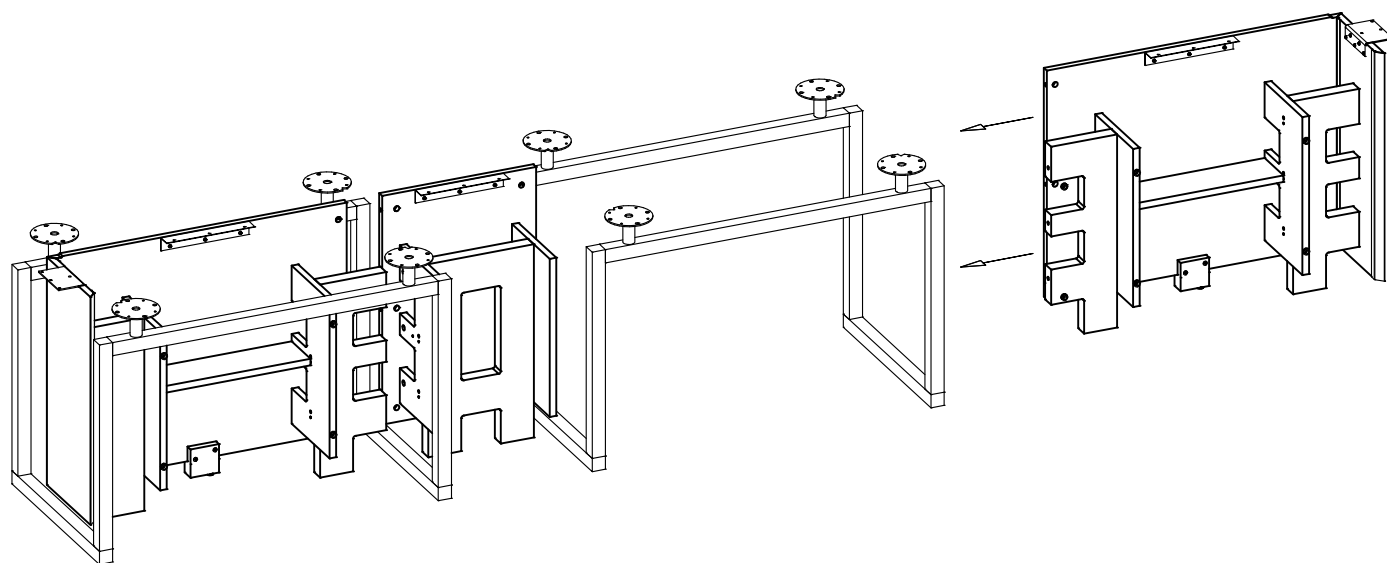


MULTI-PIECE BASE AND TOP (TABLE SIZES OVER 120")



JOIN PLINTH BASE SECTIONS

** Join plinth base sections using double head cams to join panels, and mini-fix cams to join center supports.

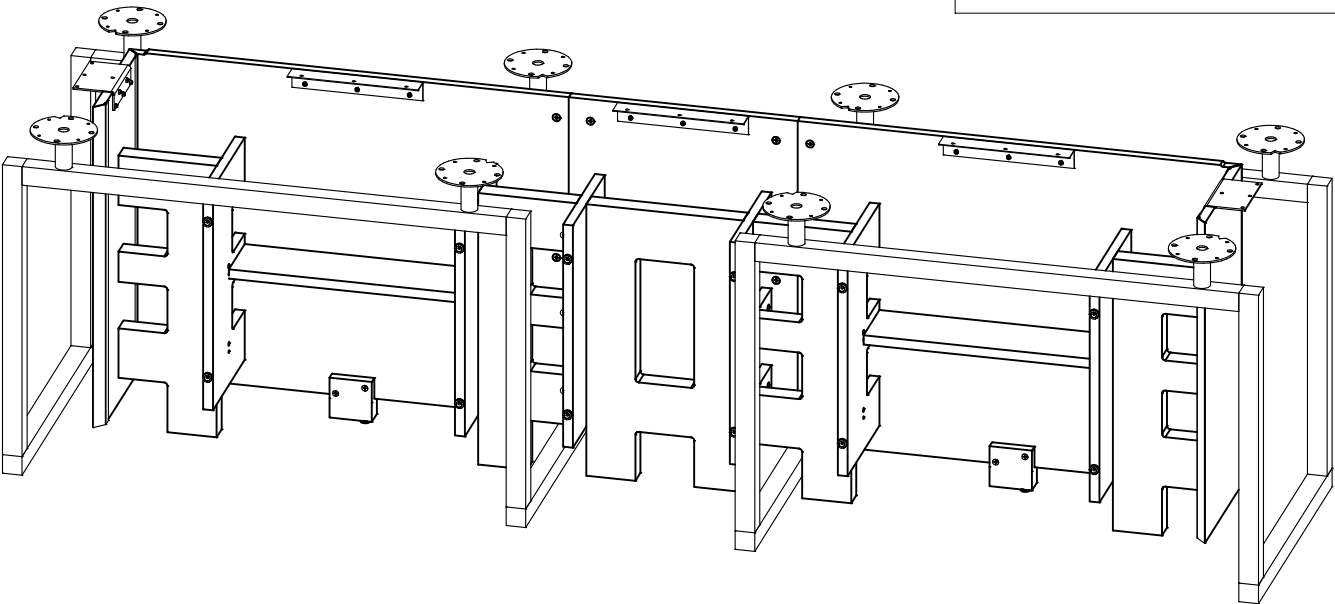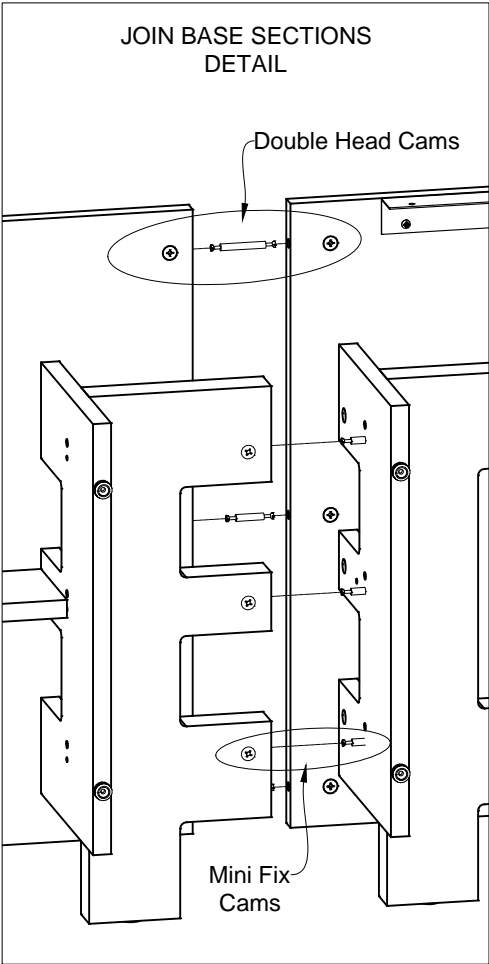
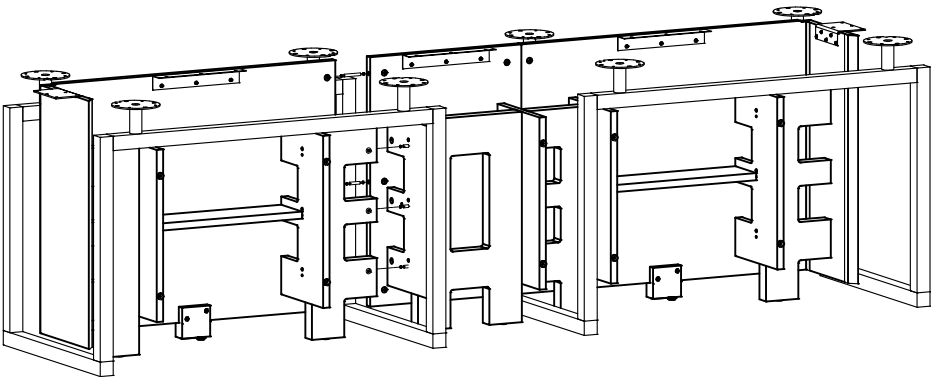


MULTI-PIECE BASE AND TOP (TABLE SIZES OVER 120")

TUOHY

PLACE TOP AND JOIN SECTIONS


- ** Place top sections on frame and join top sections together using field joints.

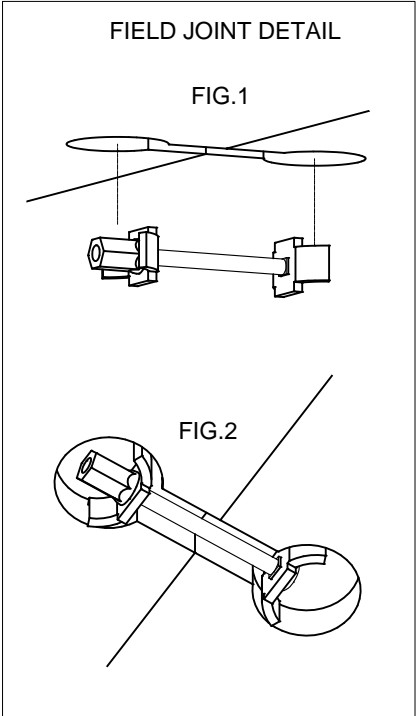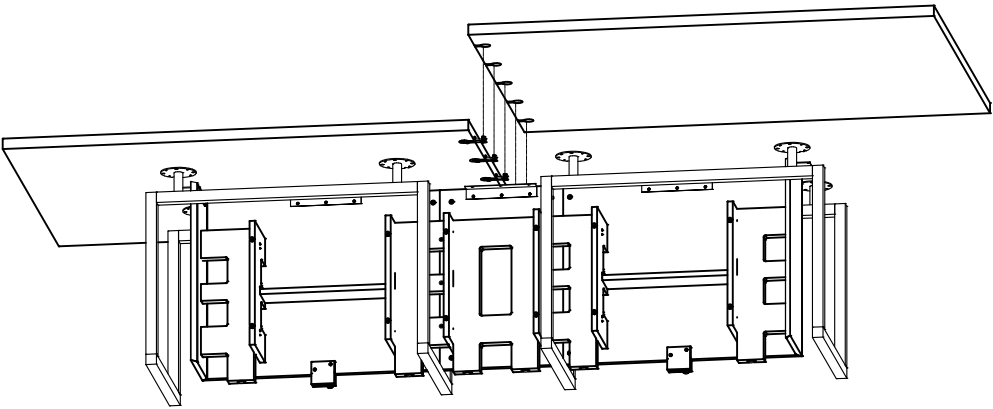

CENTER TOP AND ATTACH TO FRAME

- ** Center top on frame.
- ** Ensure top is level. Make final adjustments to post levelers as needed to ensure top is level.
- ** Attach round mounting plates on metal base frame to top.
 - ~ If inserts were used in top use M8-1.125 x 25 button head socket cap screws.
 - ~ If no inserts were used in top use #10 x 1" pan head screws.

IMPORTANT: Ensure top is level before screwing frame to top.

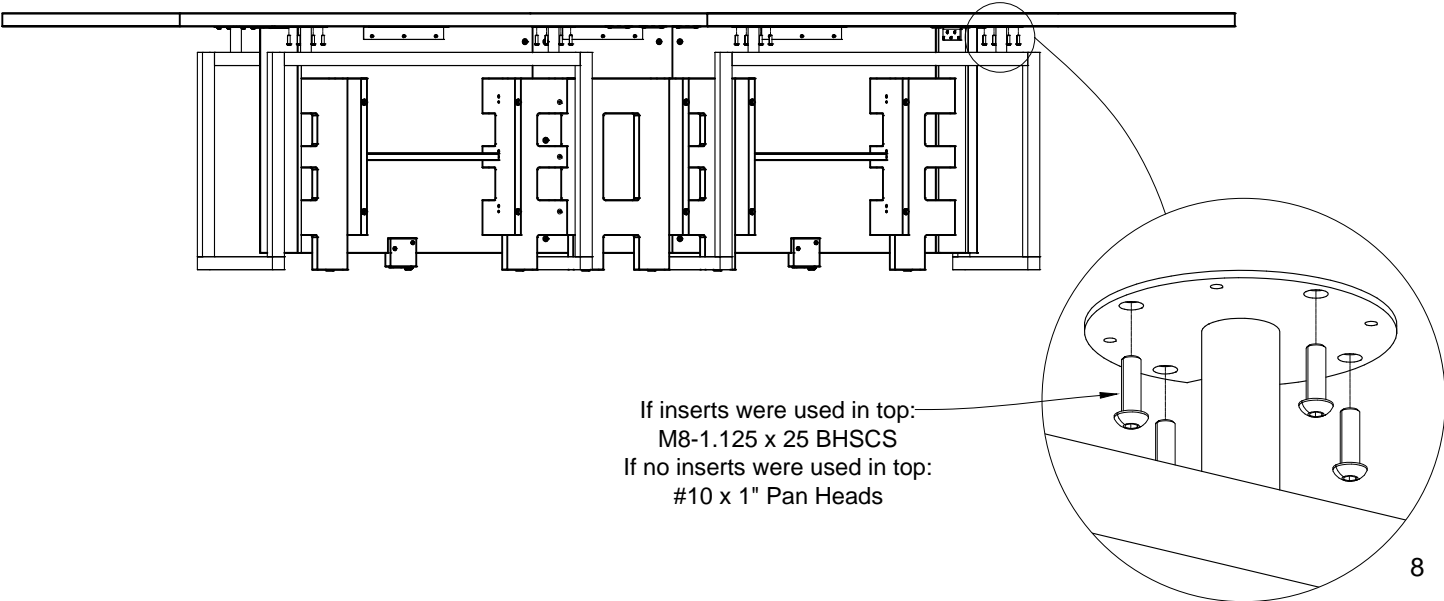


If inserts were used in top:
M8-1.125 x 25 BHSCS
If no inserts were used in top:
#10 x 1" Pan Heads

MULTI-PIECE BASE AND TOP (TABLE SIZES OVER 120")

TUOHY

CENTER PLINTH & ATTACH TO TOP


- ** Level up plinth to top with levelers under plinth.
- ** Center plinth in frame.
- ** Attach 5" angle irons to top using #10 x 1" Pan Head Screws
- ** Attach 10" angle iron to top using #9 x 5/8" Pan Head Screws

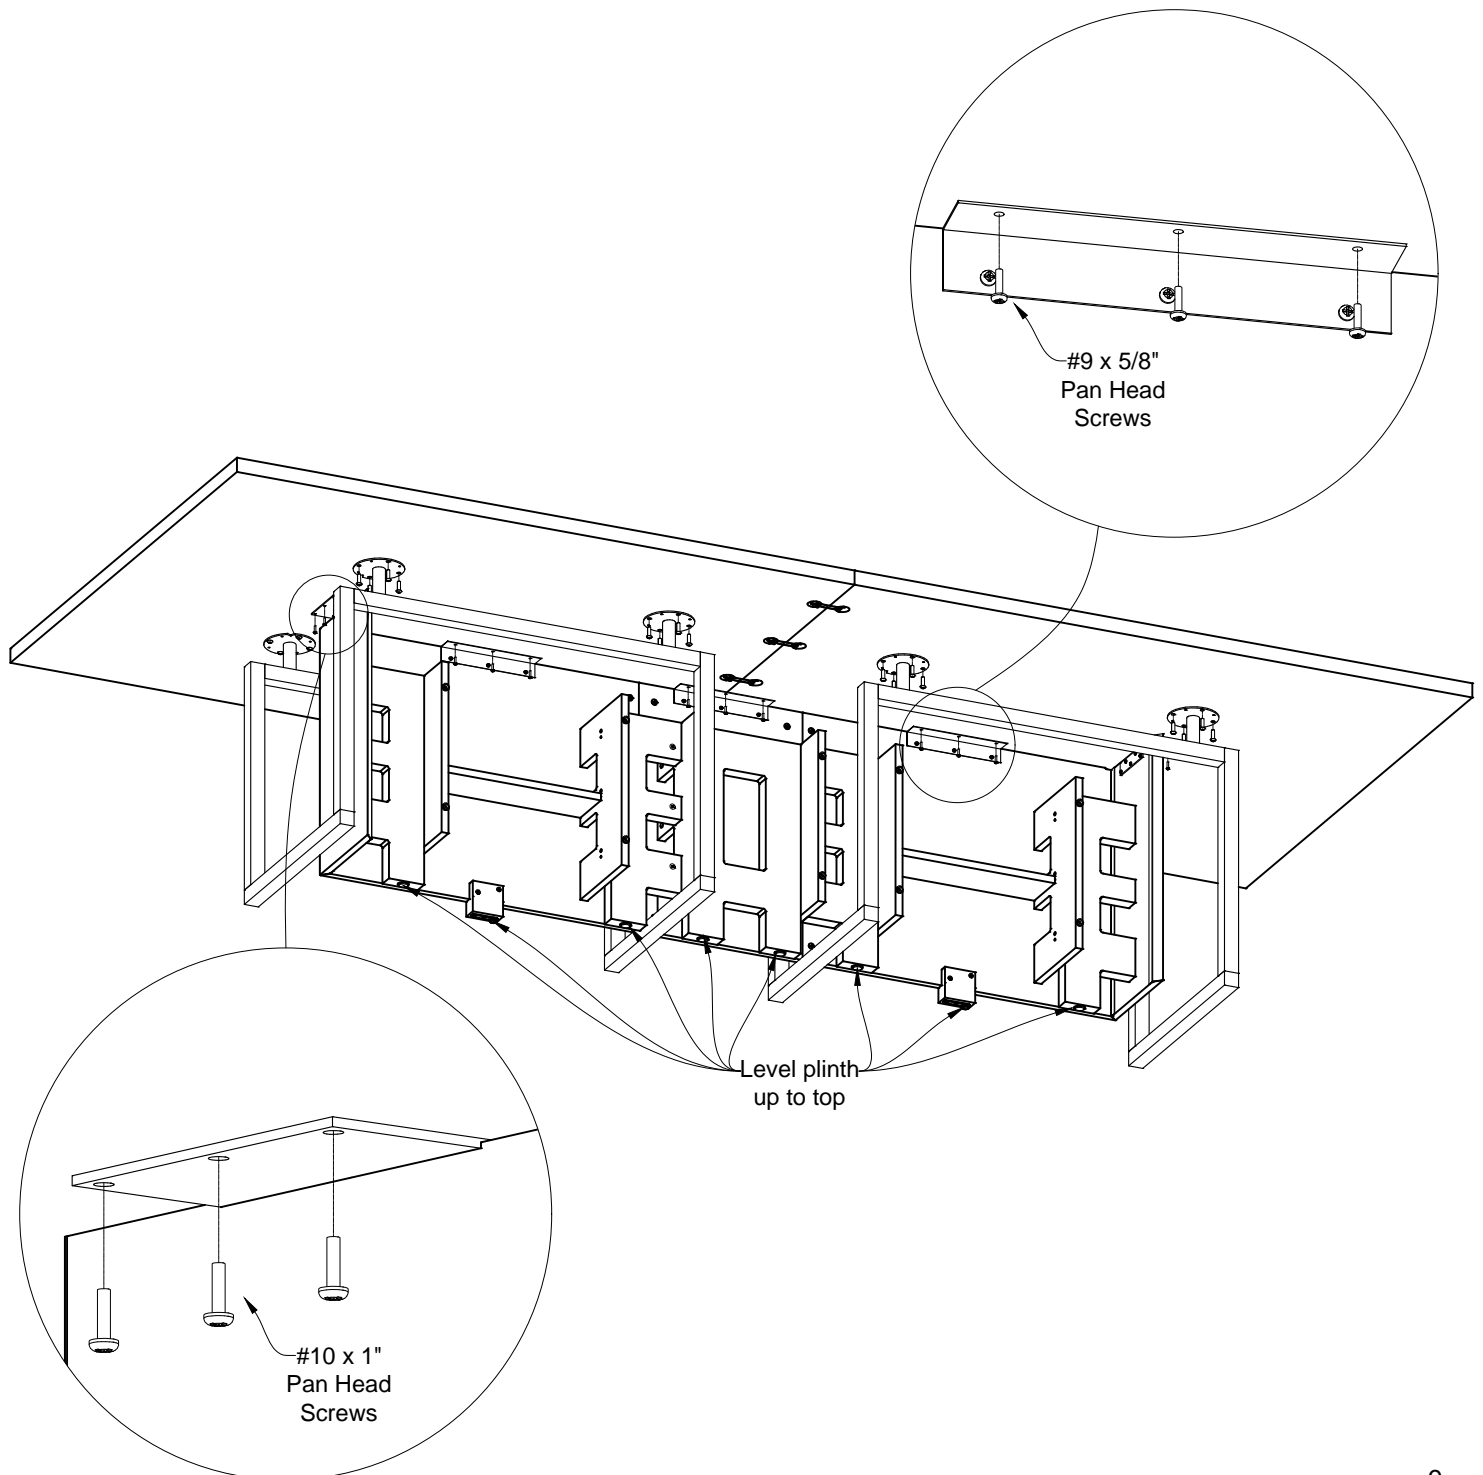

MULTI-PIECE BASE AND TOP (TABLE SIZES OVER 120")

TUOHY

REMOVE LEVELER BLOCKS

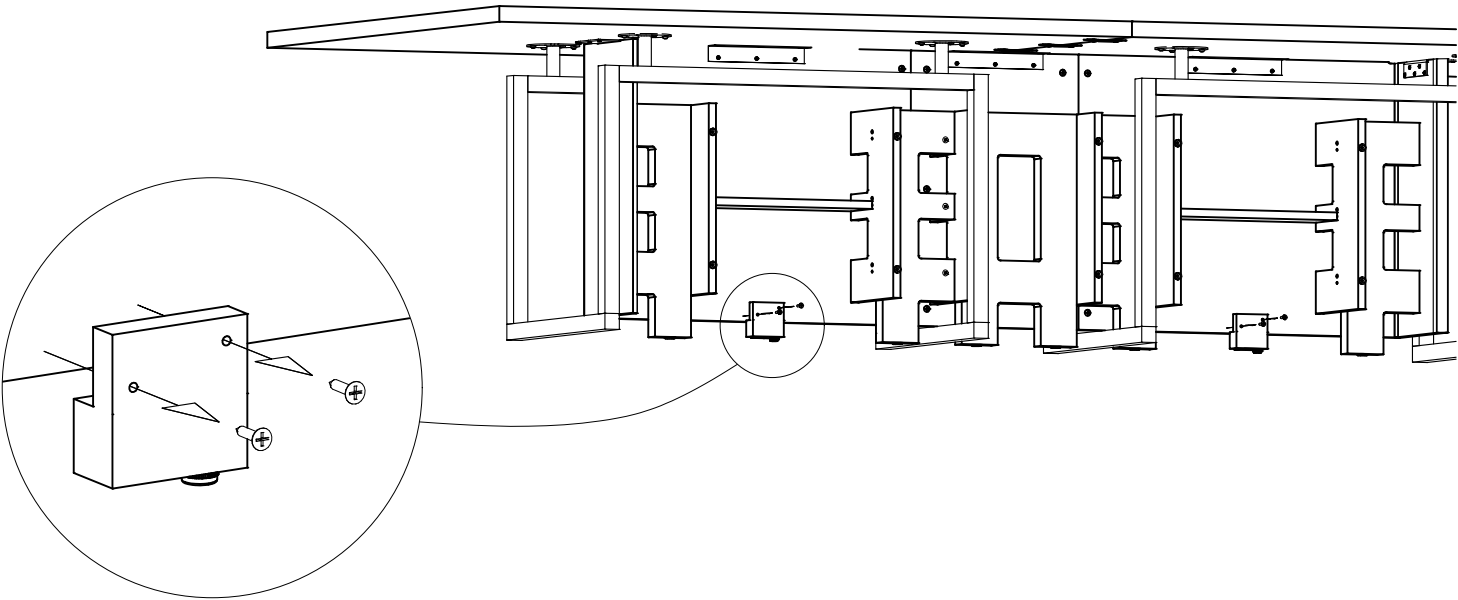

REPLACE COVER PANELS

** Re-Attach cover panels by bringing panel in towards base and locking down into place aligning with button fixes. (See Detail B)

