

### DPG1C

The DPG1C has three operation buttons.

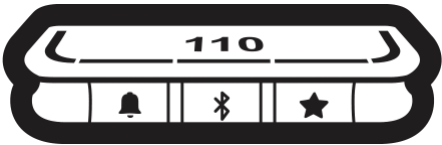





Figure 32: DPG1C operation buttons

Each button has a specific function:



Symbol	Description	Function
	Reminder	Setting reminders
	Bluetooth®	Connecting the Desk Control™ App via Bluetooth® wireless technology
	Favourite	Saving favourite positions

### Display

The DPG1C has an OLED display, which shows the height during drive of the desk and many other texts to guide the users.



### Adjusting the displayed height of the desk

If the height shown in the display is not correct, it can be adjusted.

1. Press  and the  buttons on the DPG1C at the same time for five seconds and the height in the display starts to flash.
2. Tilt the DPG1C to change the displayed height without moving the desk. Tilt up to increase the displayed height, tilt down to decrease the displayed height.
3. Press any button to confirm the height or wait for 10 seconds for automatic confirmation.

### Changing the measurement unit

The measurement unit shown in the display can be set to either cm or inch.

1. Press  and  buttons on DPG1C at the same time for five seconds and the current measurement unit flashes in display.
2. When e.g. "CM" flashes in display, tilt DPG1C once to change measurement unit to inch. "INCH" now flashes in display.
3. Press any button to confirm measurement unit or wait for 10 seconds for automatic confirmation.