

Height-Adjustable Tables

Set Upper and Lower Height Limits

TUOHY

Operate the desk panel by tilting it.

1. Tilt and hold up DPG1C to drive desk up, press and hold down DPG1C to drive desk down.
2. Release DPG1C when you have reached your requested position.

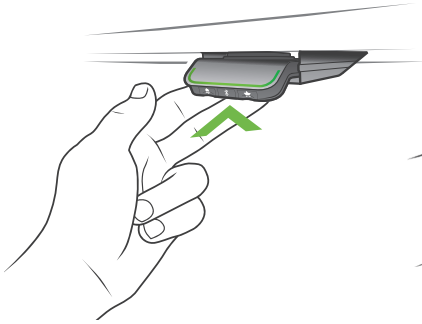


Figure 33: Tilt and hold the DPG1C to drive the desk up

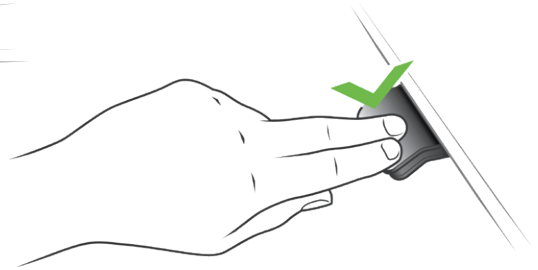


Figure 34: Press and hold the DPG1C to drive the desk down



Desk height limits

In case the desk cannot be operated in its entire span (e.g. a shelf is blocking the upwards movement or a filing cabinet is placed under the desk and blocking the downwards movement), it is possible to set an upper limit and a lower limit for the desk height.



Note:

It must always be possible to drive the desk to its minimum height in case initialisation is required. During initialisation items placed under the desk must be removed.

Setting upper limit

1. Adjust desk to maximum allowable height.
2. Press  and tilt DPG1C up at the same time for 8 seconds until light flashes.
3. Release  and DPG1C.

Setting lower limit

1. Adjust desk to minimum allowable height.
2. Press  and press DPG1C down at the same time for 8 seconds until light flashes.
3. Release  and DPG1C.