

INSTALLATION GUIDE
Prima Collection

April 1, 2017

TUOHY



Table of Contents

TUOHY

Desk

Typical Desk Shell & Runoff Shell Connection Details . . .	1
Typical Desk Shell Configuration Layouts	2
WorkSurface Installation	3
Typical Run-Off Installation Diagram	4

Credenza

Typical Credenza Shell Layouts	5
Typical Pedestal Installation	6

Gallery


Typical Closed Gallery Connection Details	7
Typical Open Desk Gallery Connection Details	8
Runoff Gallery Connection	8
Gallery Panel Installation Details	9
Gallery Transaction Top Connection Details	10
Typical Gallery Surround Connection Details	11
Gallery Surround Panel Installation Details	12
Gallery Backsplash Attachment Details	13

Typical Desk Shell & Runoff Shell Connection Details

TUOHY


90° Panel Connection

(Typical End Panel to Modesty Panel Connection)

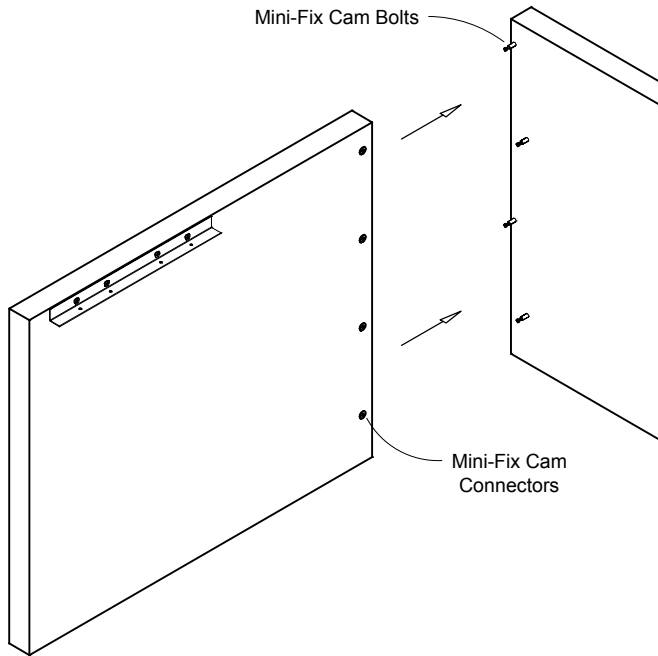


Filler Panel Connection

(Desks with Recessed Gallery Option)

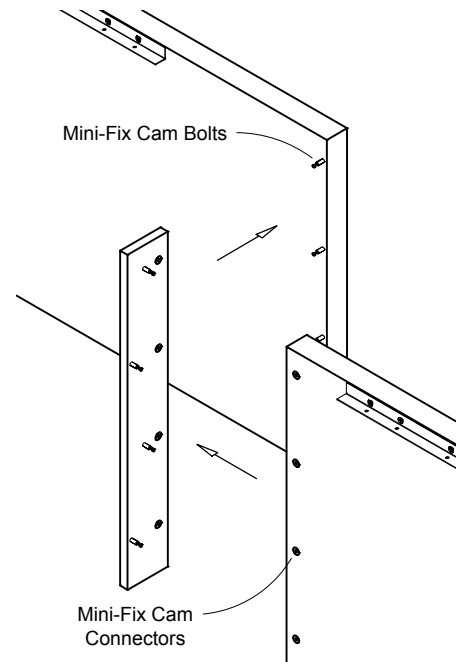


In-Line Panel Connection

(Typical Runoff Modesty Connection to Desk End Panel)

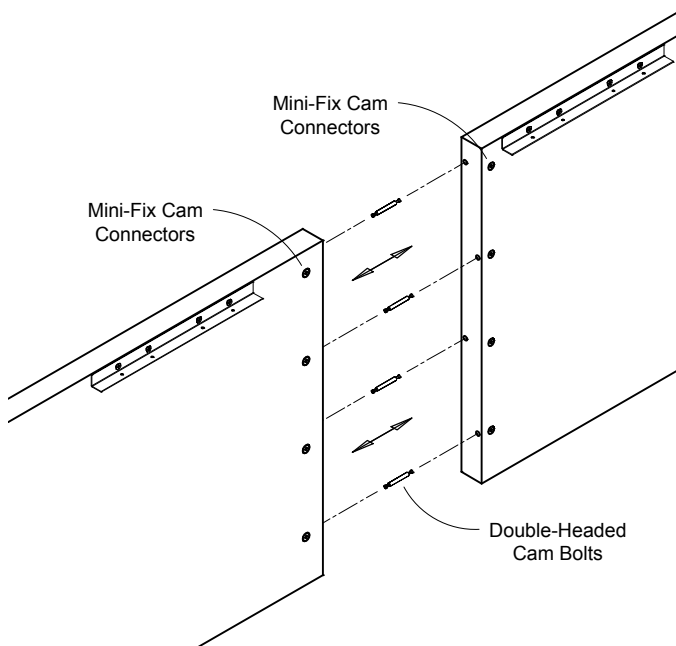

WKSF Connection Bracket

(Factory Milled Pilot Holes Provided)

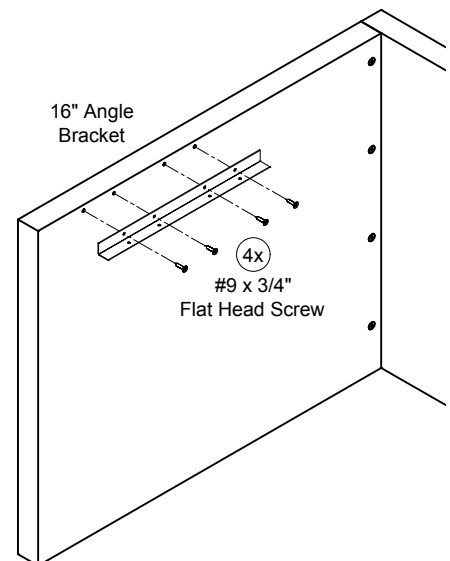


Typical Desk Shell Configuration Layouts

TUOHY


Closed Desk Shell

Requires 16" Angle Brackets for WKSF Attachment

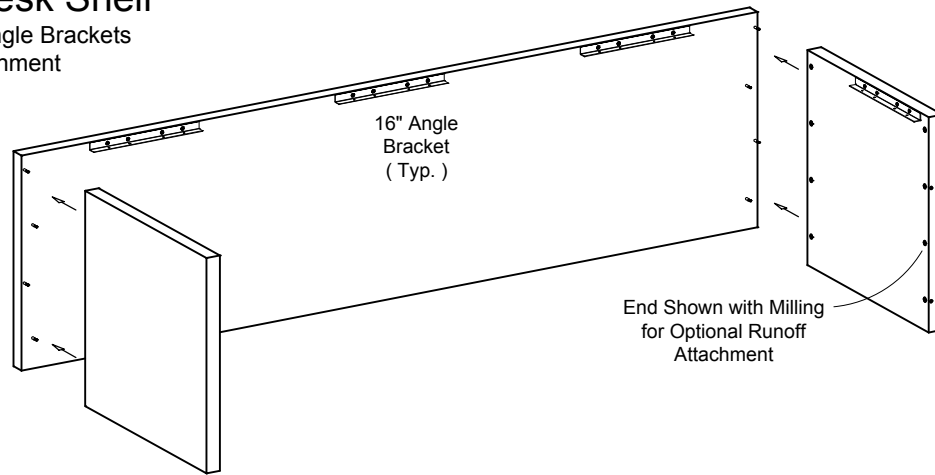


Closed Desk Shell with Recessed Gallery Option

Requires 16" Angle Brackets for WKSF Attachment

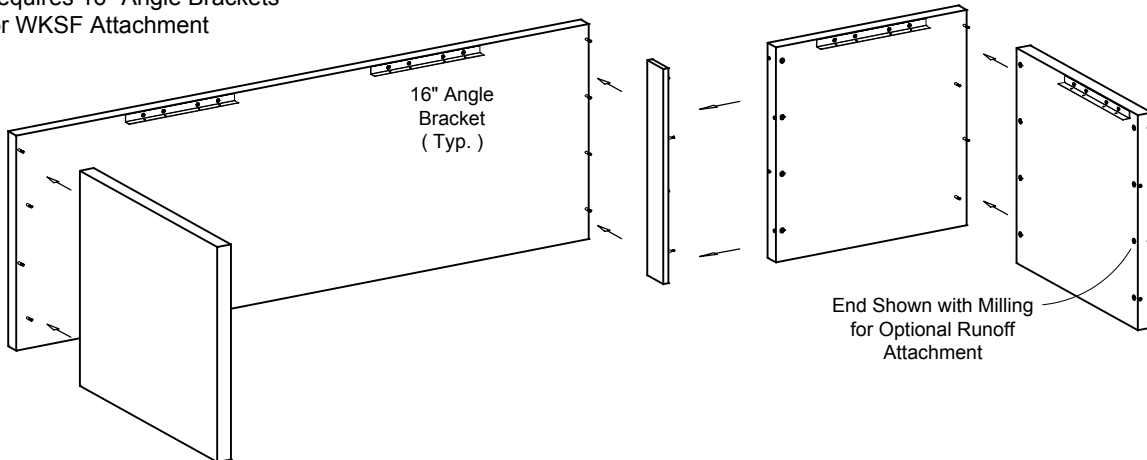

Open Desk Shell

Requires Plate Brackets for WKSF Attachment

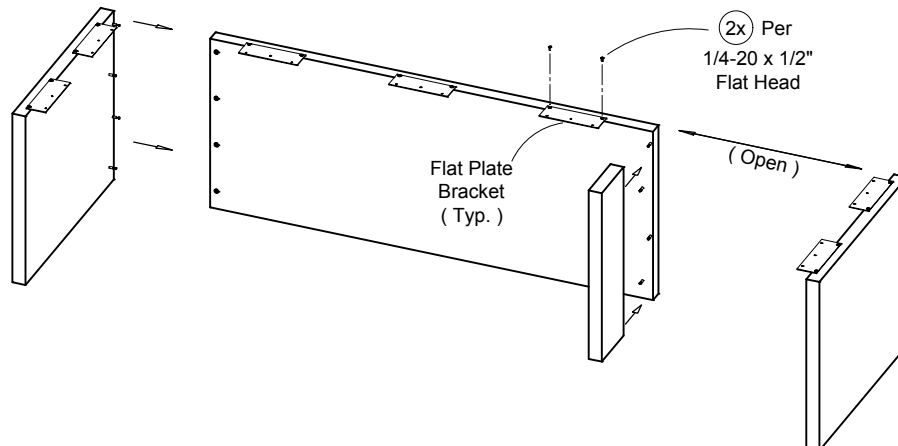


WorkSurface Installation

Closed Desk Design (1/2" Material Option Tops *)


TUOHY

* Veneer WKSF with Factory Attached Sub-Top

- Install as Conjoined Veneer Top with Pre-Attached Sub-Top.
- Respective Sub-Top Milling to Match 16" Angle Support Brackets.

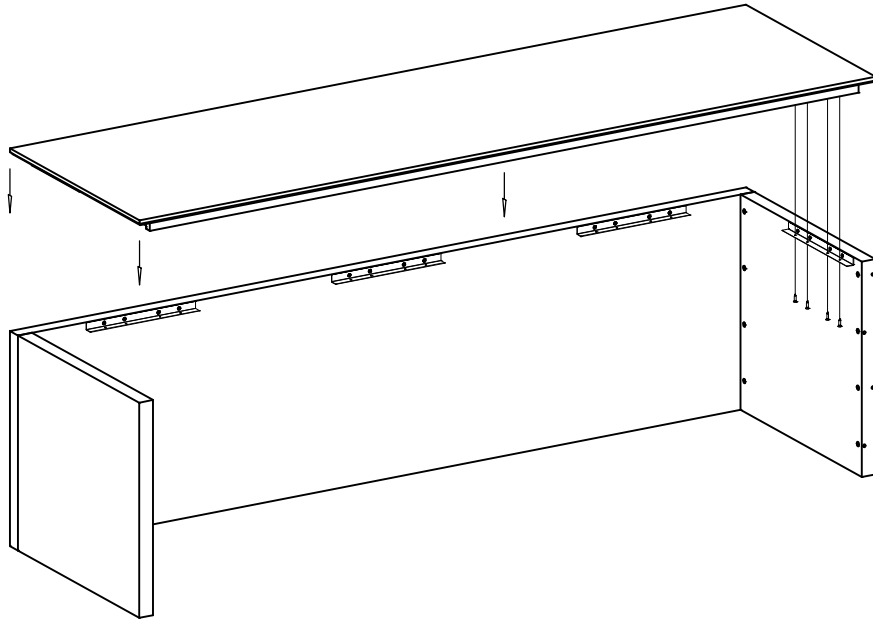


Typical Sub-Top Connection Detail

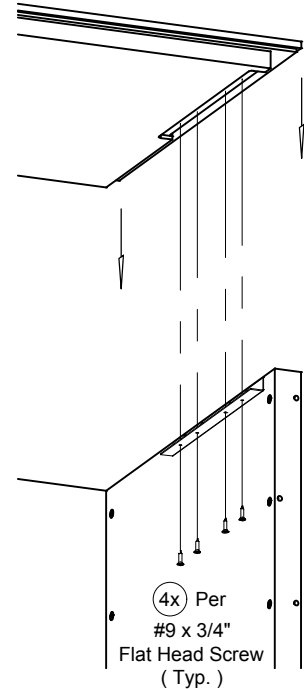


* Stone WKSF - * Corian WKSF - ** Glass WKSF

- (Field Attach to Installed Sub-Top On-Site) - - -
- Optional Stone, Corian or Glass Tops Install On-Site After Corresponding Sub-Top has been Installed In Desk Shell.
- Adhere Stone, Corian or Glass Tops with Provided Silicone & Disposable Trowels.
- Respective Sub-Tops are Milled to Match 16" Angle Support Brackets. See Typical Sub-Top Connection Detail.

* (Under-Side View)

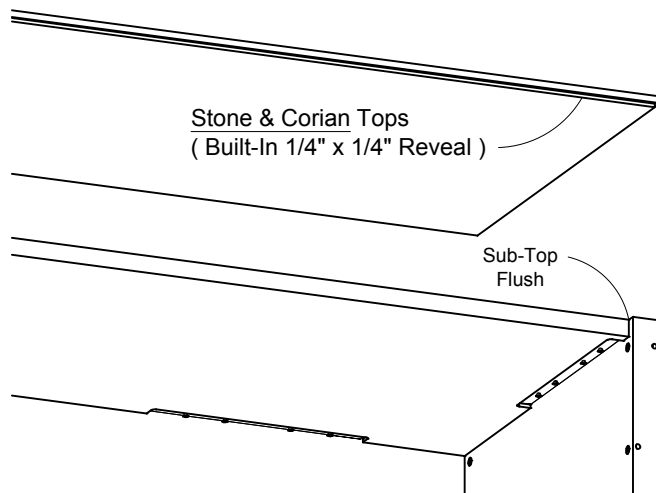

** (Under-Side View)

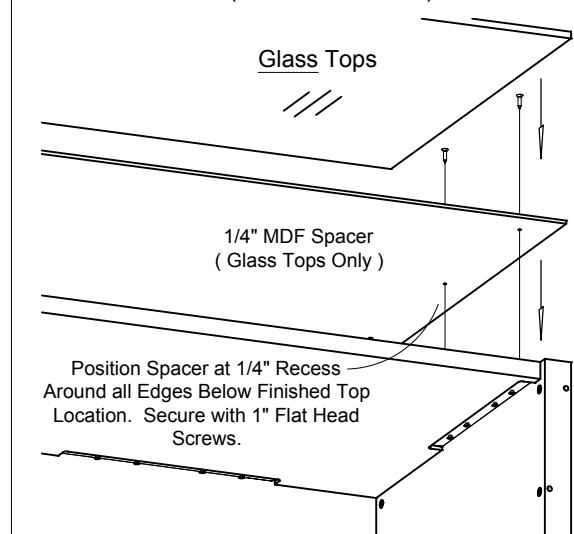


WorkSurface Installation Open Desk Design (2" Top Surface)


TUOHY

Veneer WKSF Only

- 2" WKSF Design - With Under-Side Pocket Milling.
- Match Pocket Milling to Respective Flat Plate Support Brackets.
- See 2" WKSF Connection Detail.

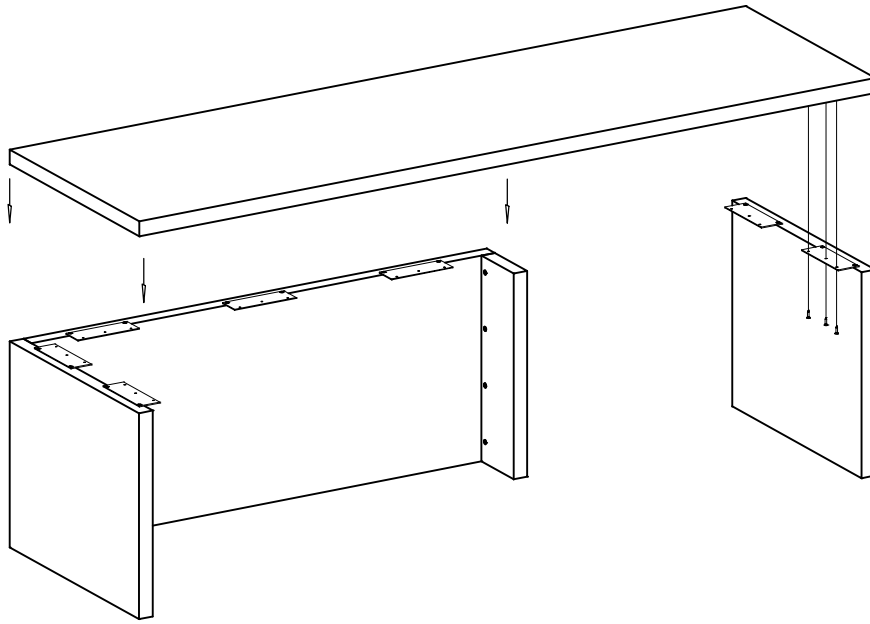


2" WKSF Connection Detail

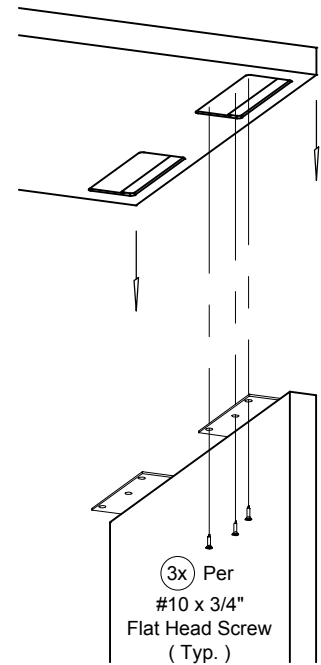


Typical Run-Off Installation Diagram


Assemble Run-Off Shell using Same Connection Methods as the Desk.
Use Bridge Plate to Connect WorkSurfaces as Shown Below.

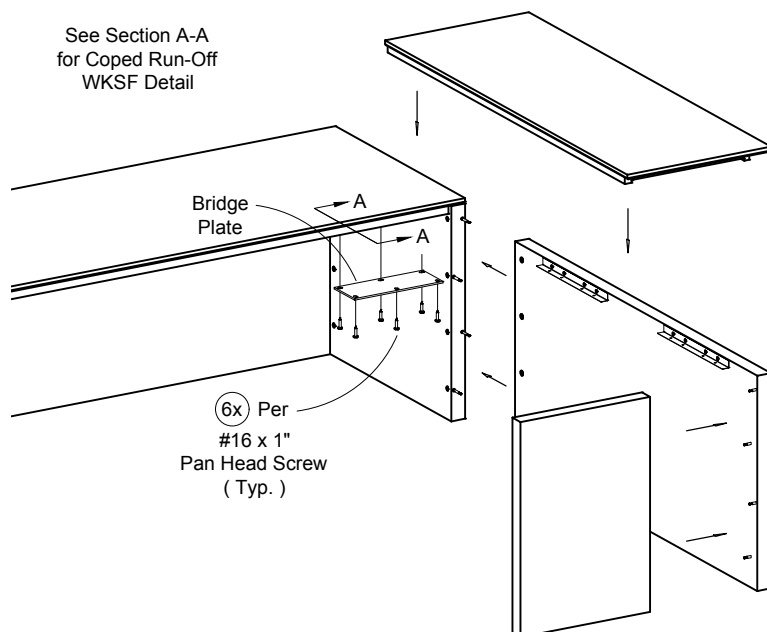

Section A-A Typical Coped Run-Off WKSF Section Detail

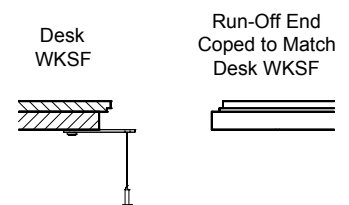


Typical Finished Run-Off Connection

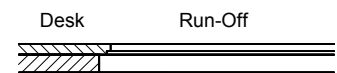


Typical Credenza Shell Layouts

TUOHY


1/2" Finished Top Surface Design - (Finished Back) (2" Exposed Finished Back Option)

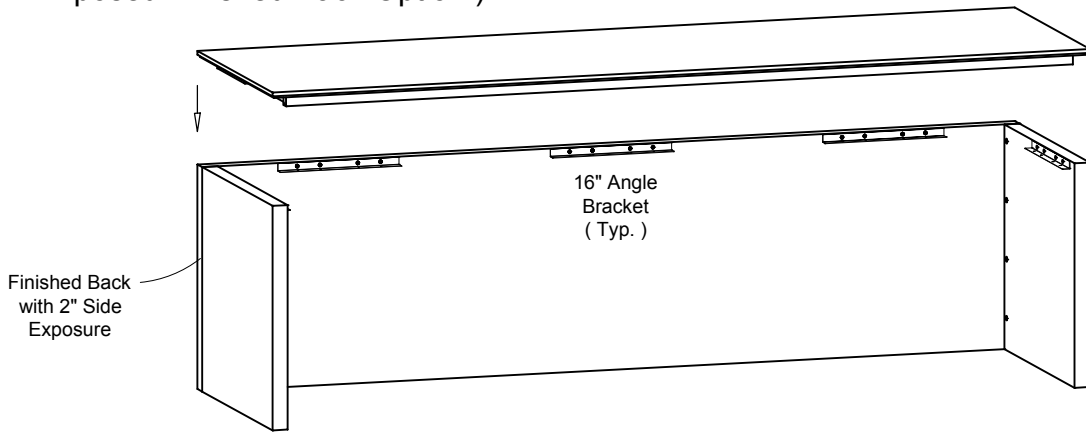

1/2" Finished Top Surface Design - (Un-Finished Back) (Concealed Un-Finished Back Option)

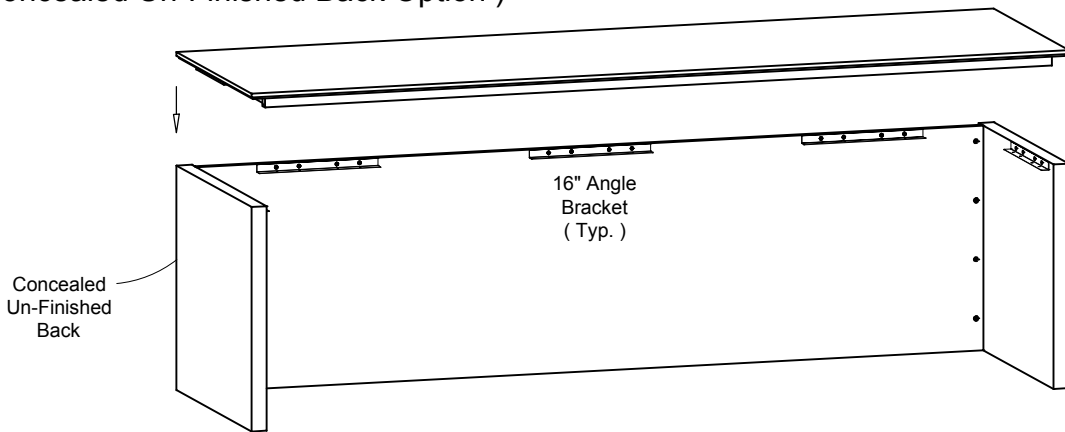




2" Finished Top Surface Design - (Finished or Un-Fin. Back) (Concealed Finished or Un-Finished Back Options)

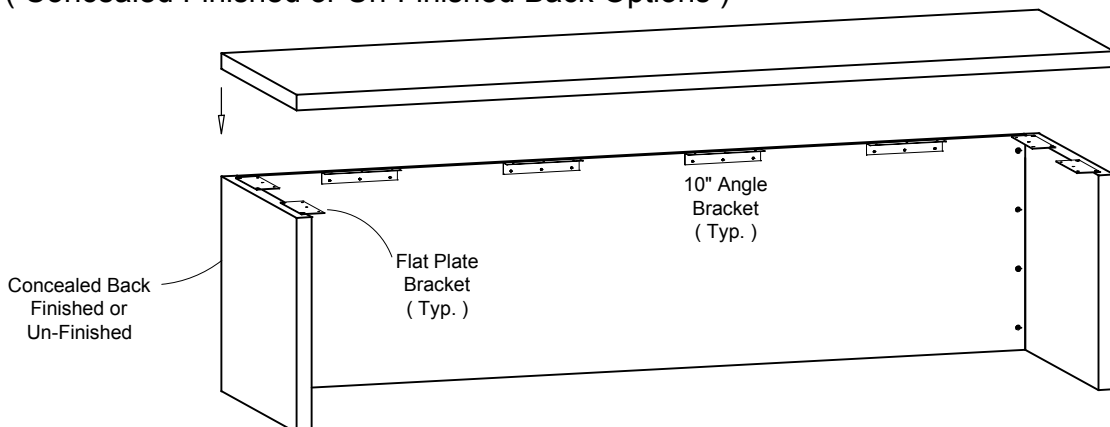

Typical Pedestal Installation

- With Pedestal Leveled and in Position Secure to 2" End of Desk / Run-Off / or Credenza
- & WKSF Sub-Top with Respective Flat Head Screws as Shown Below.
- Front of Pedestal Case to Install Flush to Front Edge of WKSF Sub-top.
- (Drawer Faces and Drawers Not Shown for Clarity)


TUOHY

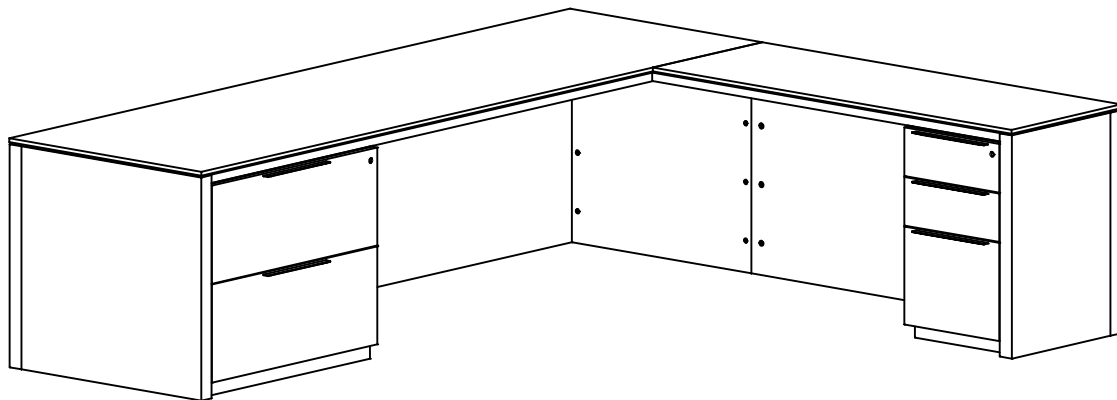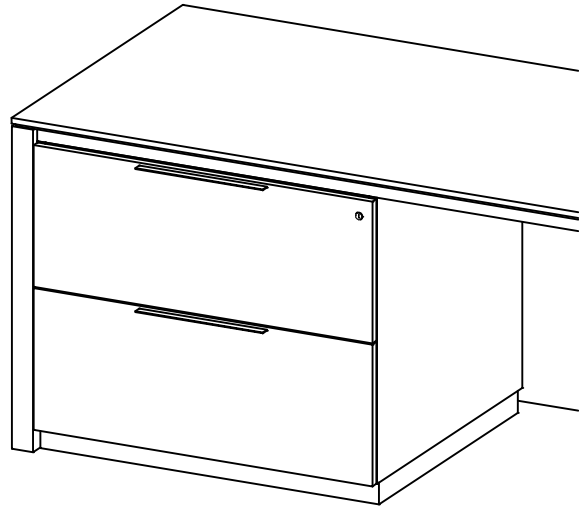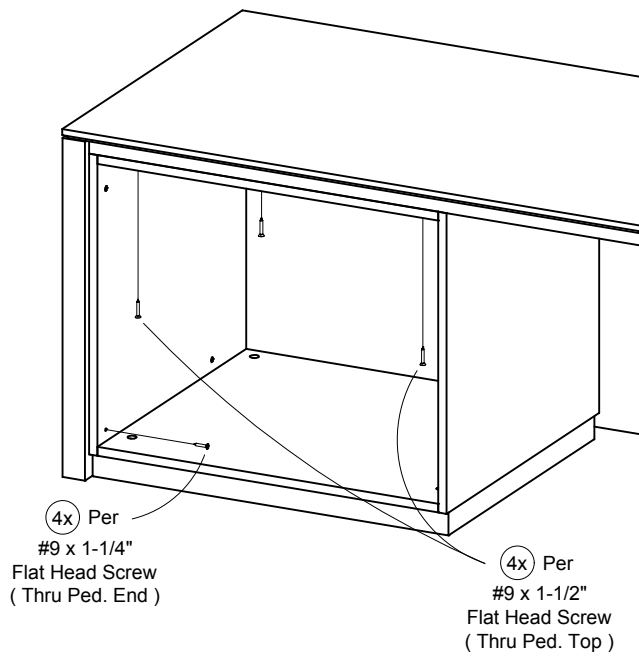


Typical Closed Gallery Connection Details




Typical Desk
Gallery Assembly

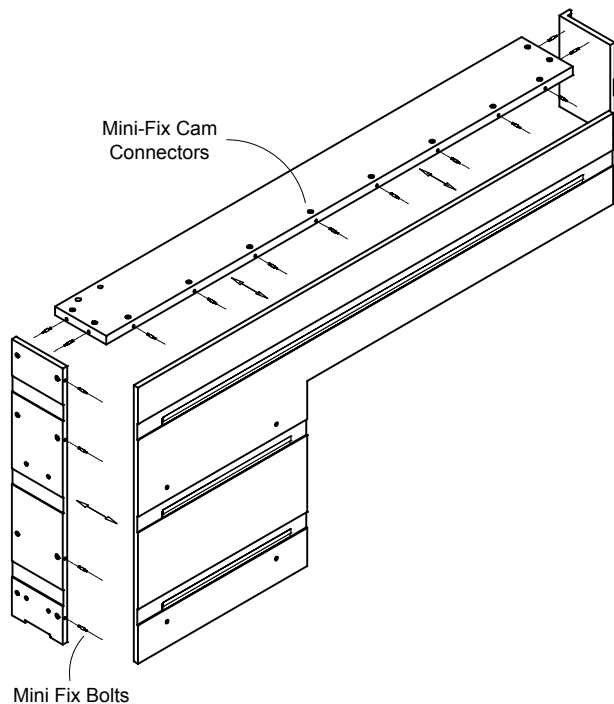

Typical Return
Gallery Assembly

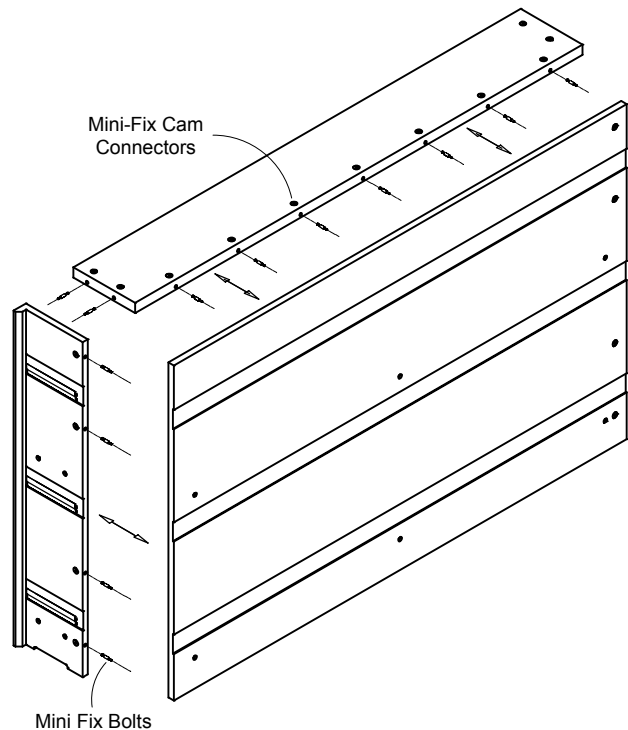


Closed Desk Gallery Connection

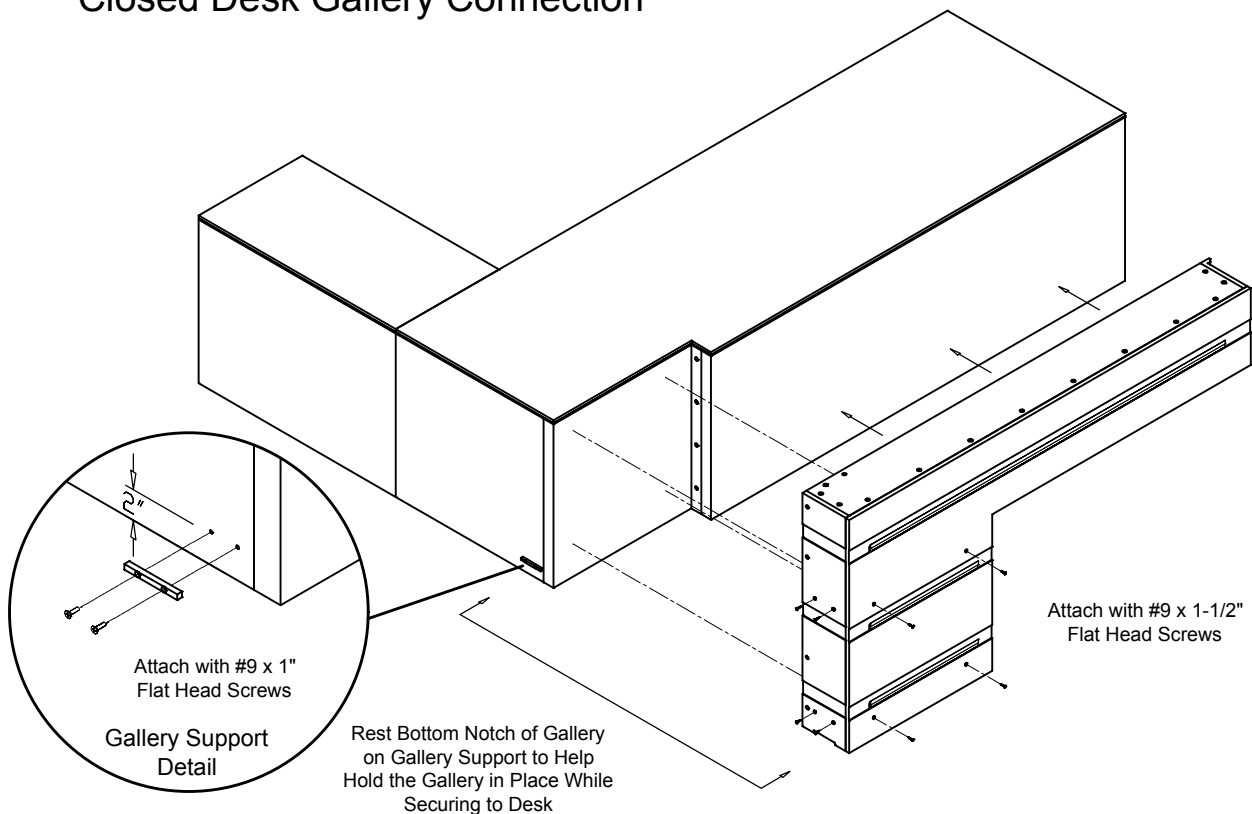


Typical Open Desk Gallery Connection Details

TUOHY

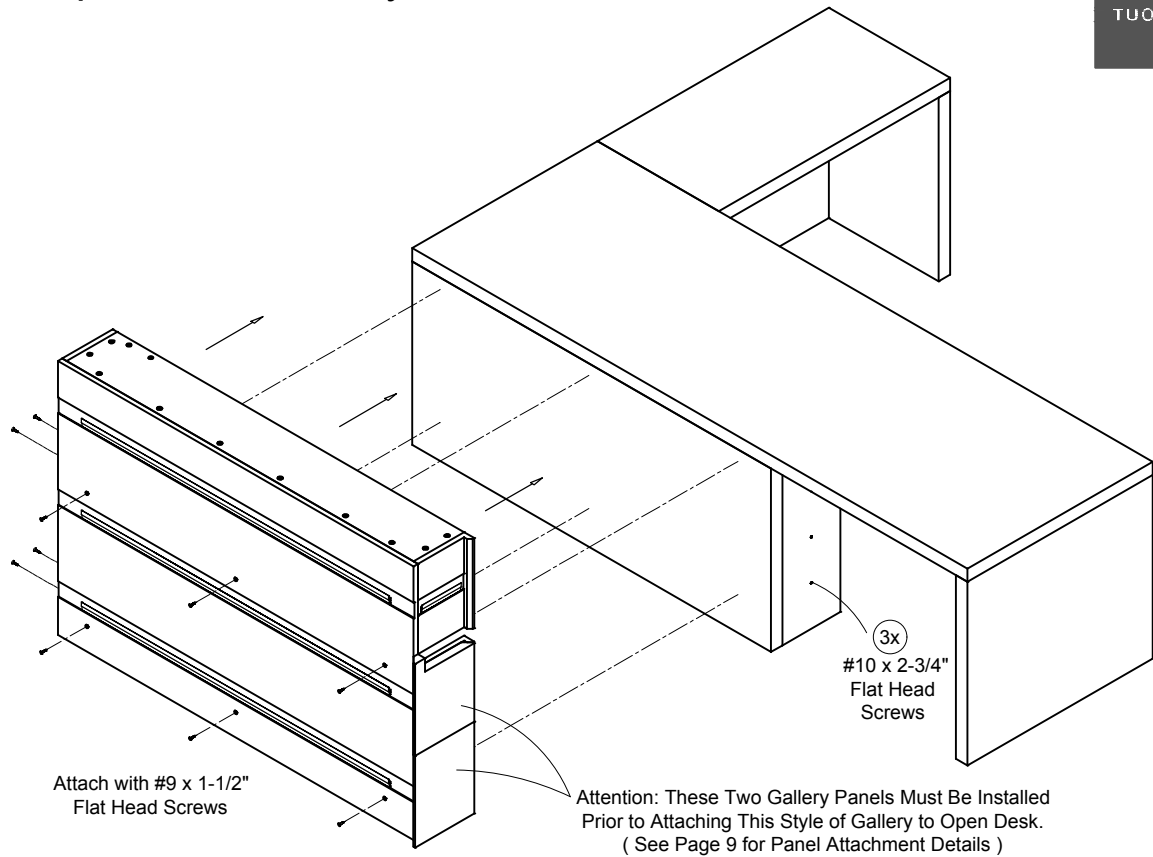


Runoff Gallery Connection








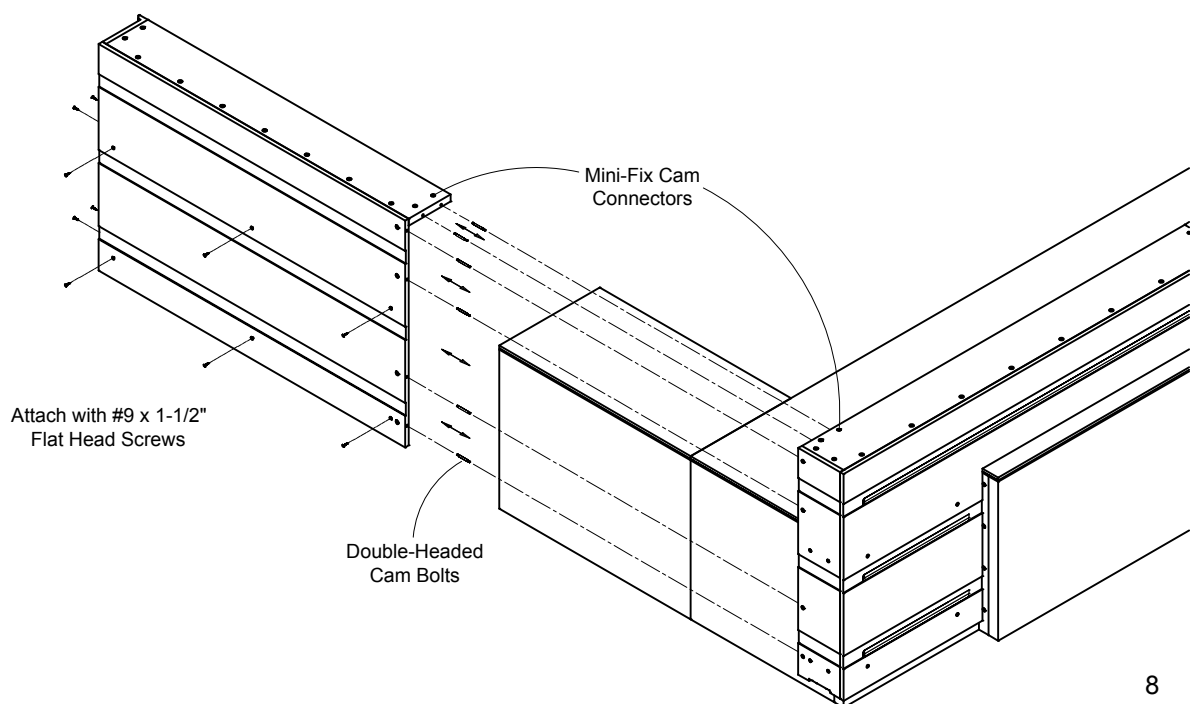


Gallery Panel Installation Details

Typical Z-Clip Field Installation

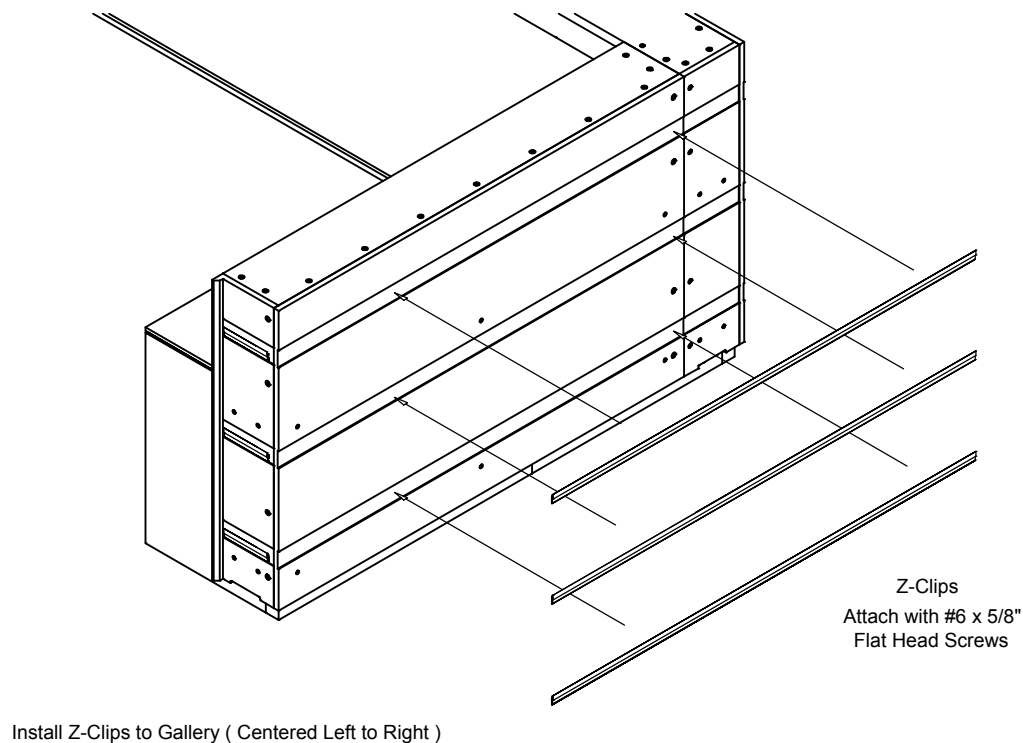


Panel Grid Options

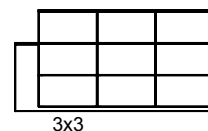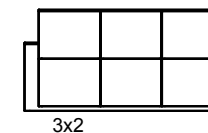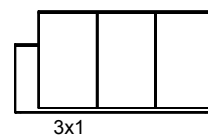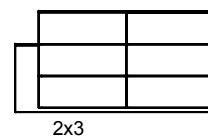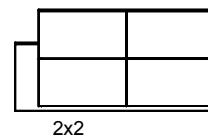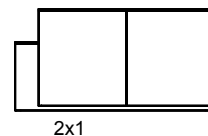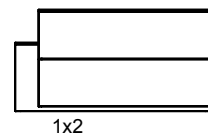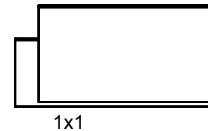

Gallery Panel Connection

1x3 Panel Grid Shown - Attach All Panel Grid Options in the Same Way From Bottom to Top.

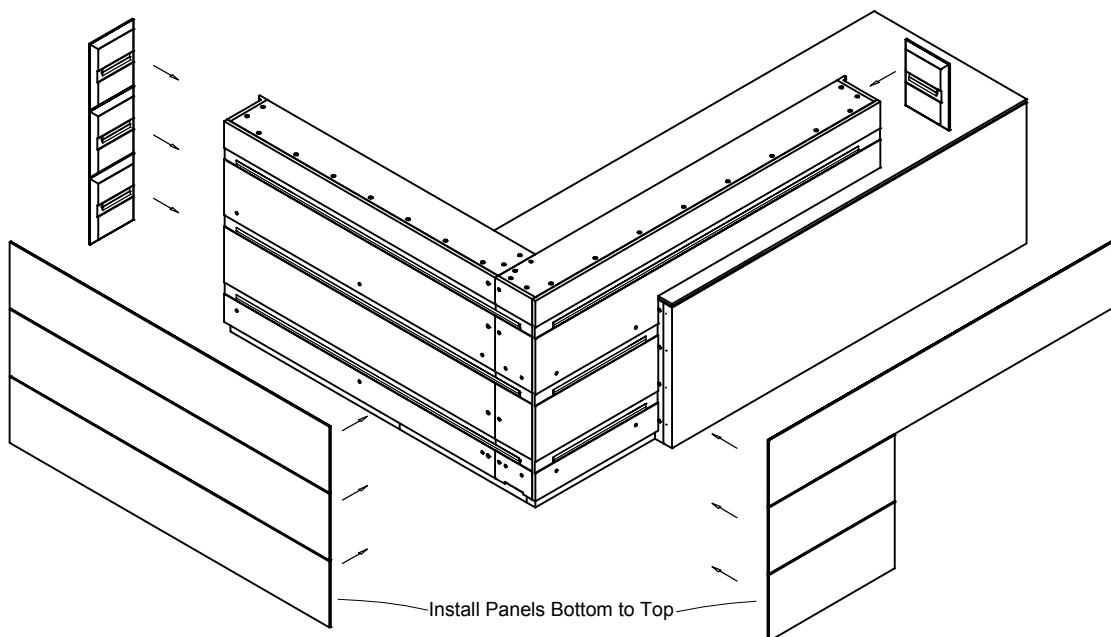


Gallery Transaction Top Connection Details


TUOHY

Gallery Transaction Tops (Veneer, Stone, and Corian)

(Typical Gallery Transaction Top for Desk Gallery and Runoff Gallery)

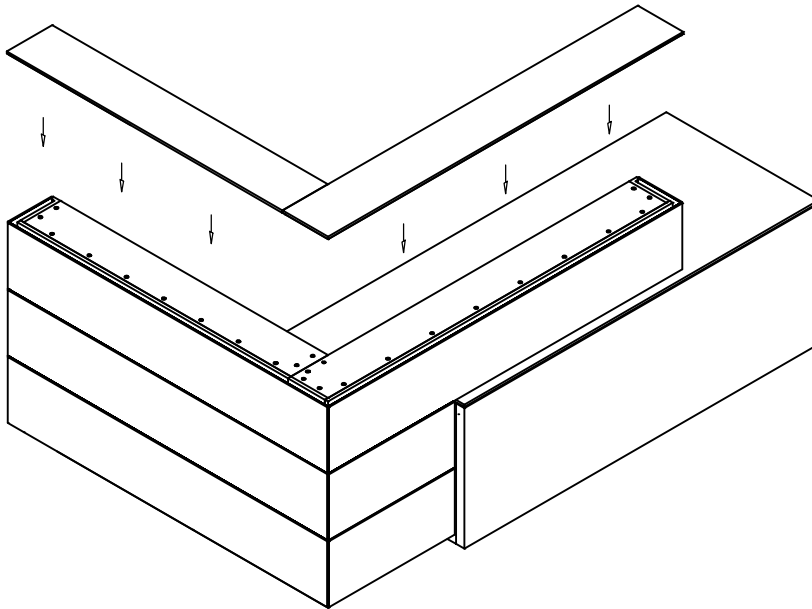



(Under-Side View)

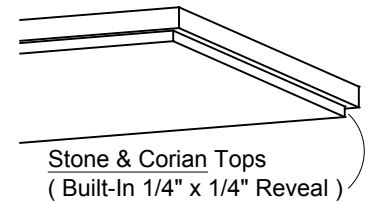

Typical Coped Run-Off
Transaction Top Detail

Desk Gallery
Transaction Top



Run-Off End
Coped to Match
Desk Gallery Top

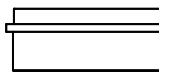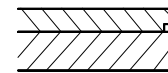

Typical Finished
Run-Off Connection
Transaction Top Detail

Desk Gallery
Transaction Top


Runoff Gallery
Transaction Top

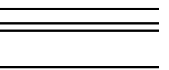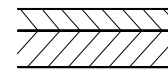

Adhere Transaction Tops with Provided Silicone & Disposable Trowels

Gallery Transaction Tops (Glass and MRBAS Brushed Aluminum)

(Typical Gallery Transaction Top for Desk Gallery and Runoff Gallery)

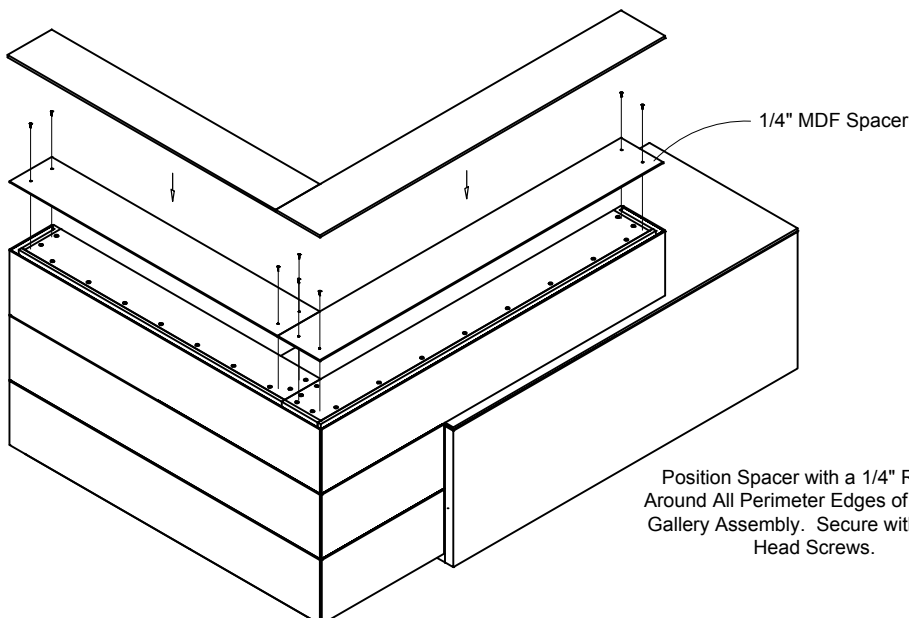


Position Spacer with a 1/4\"/>


Typical Gallery Surround Connection Details




Desk Gallery Surround Connection

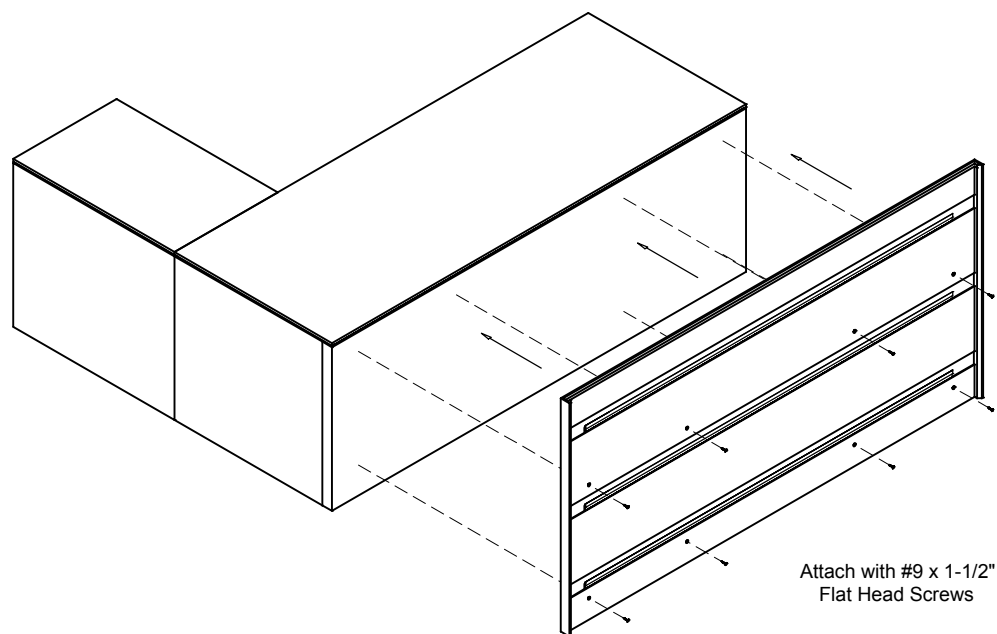

Surround to Surround Connection

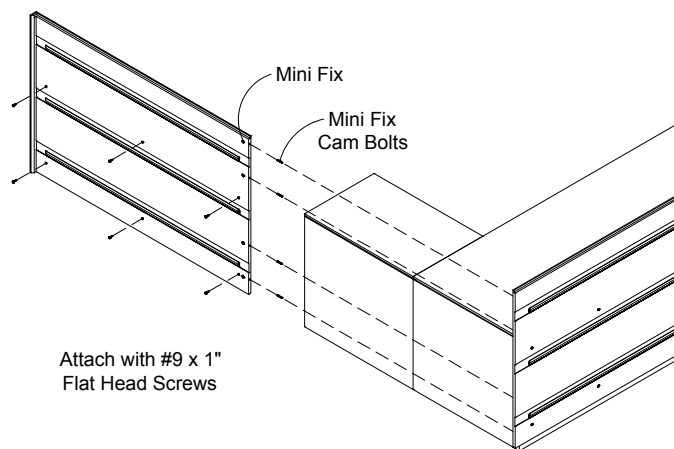


Surround to Gallery Connection

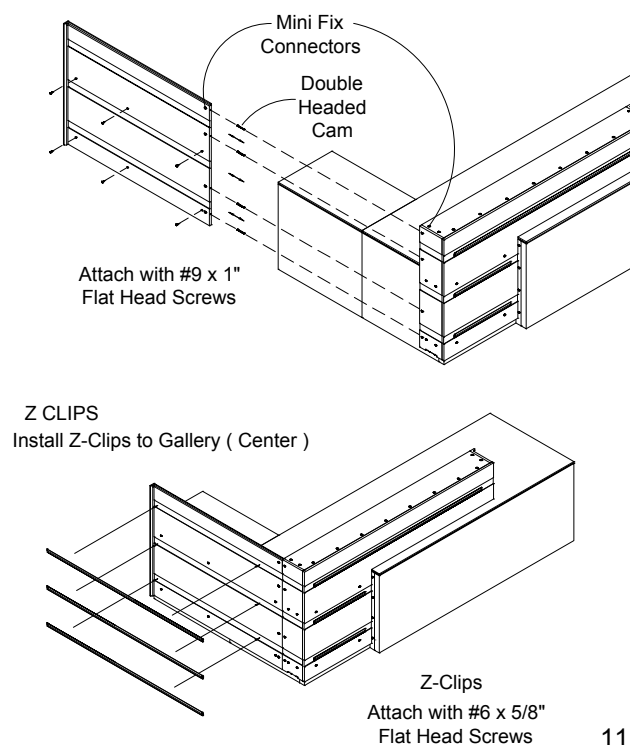


Gallery Surround Panel Installation Details

1x3 Panel Grid Shown - Attach All Panel Grid Options in the Same Way From Bottom to Top

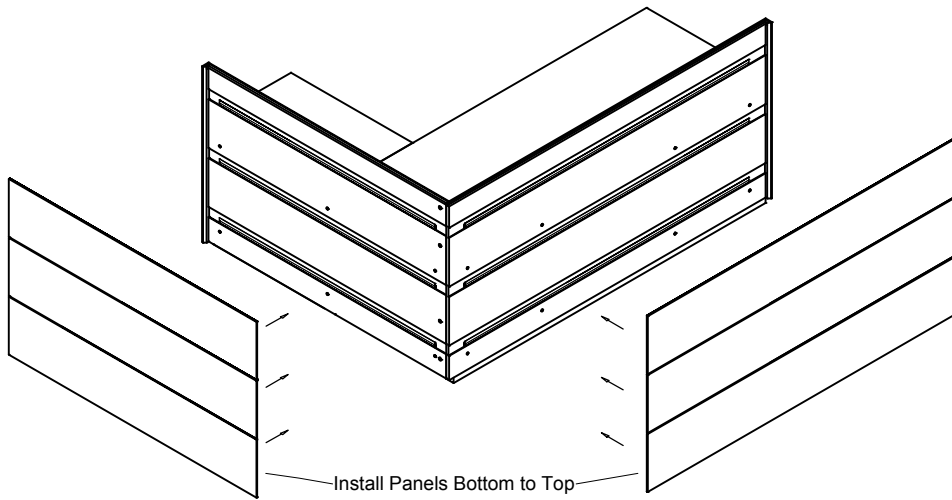


TUOHY

Surround
Panel Grid
Options

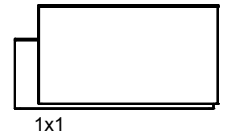



1x1

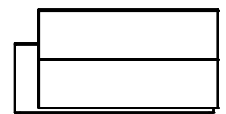


1x2

Gallery Surround Top Cap Connection

Surround Cap Top Detail

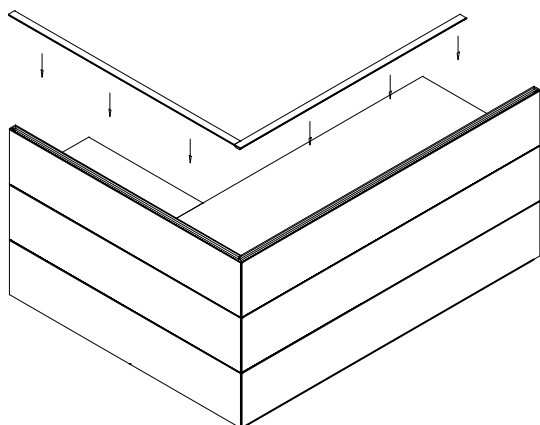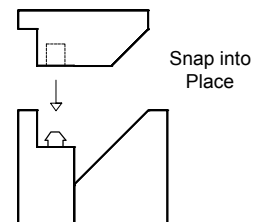

Surround to Surround Connection

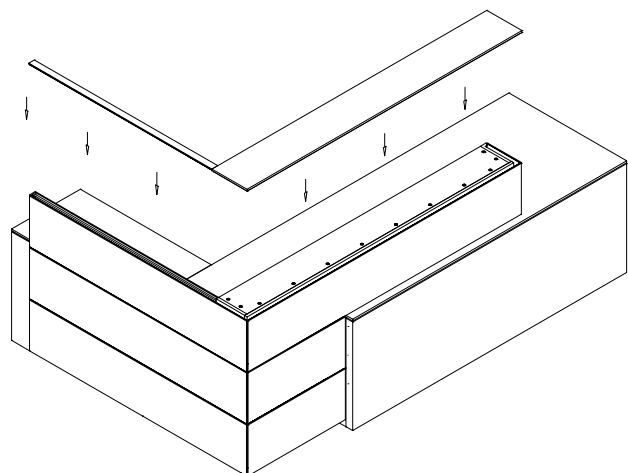

Surround to Gallery Connection

Gallery Backsplash Attachment Details

