

INSTALLATION GUIDE
Carina Tables

December 18, 2019

TUOHY

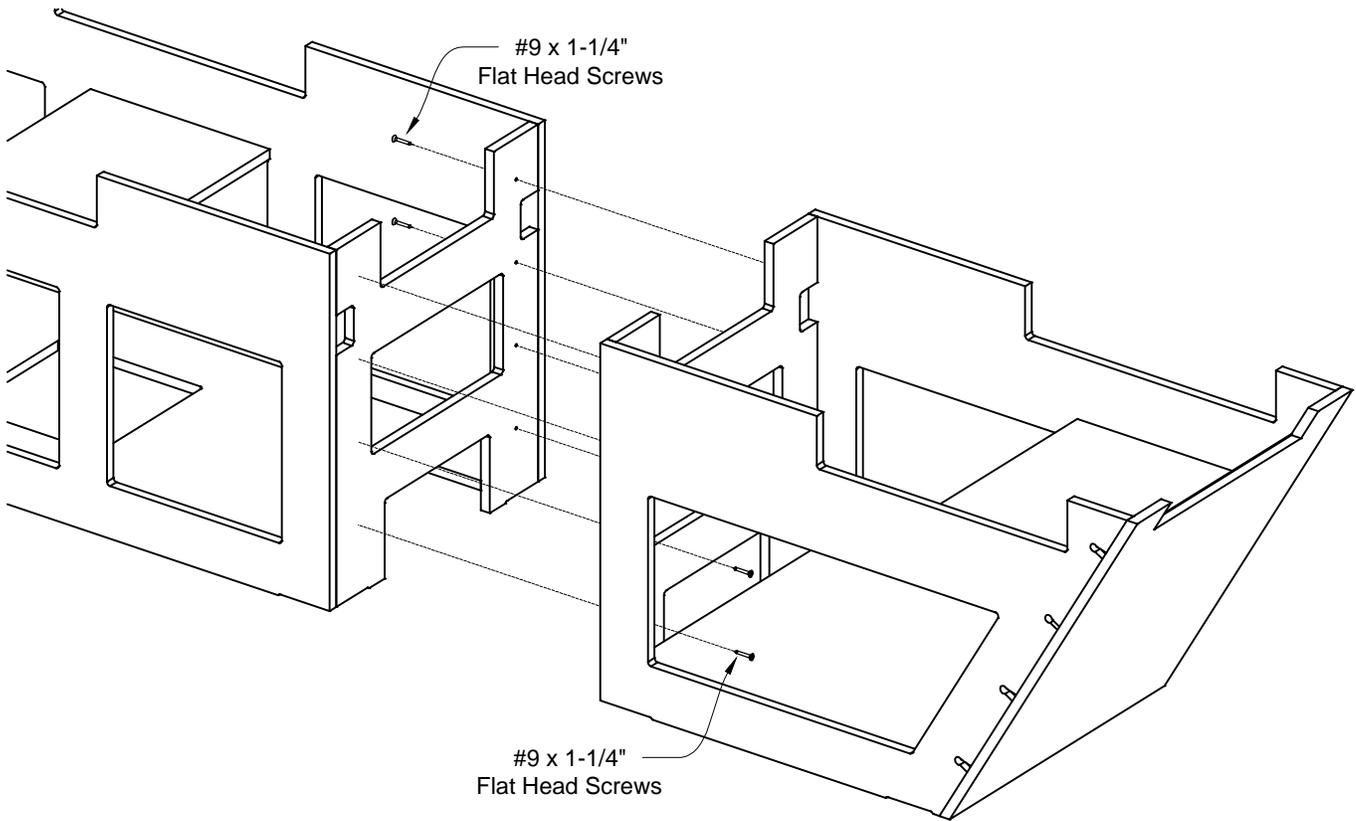


Table of Contents


Base Assembly	1
Power Drawer Installation	2
Subtop Attachment	3
Top Trim Attachment	4
Top Attachment	4
Panel Attachment	5

BASE ASSEMBLY

1. Set bases in desired location, level bases
2. Attach base sections using #9 x 1-1/4" Flat Head Screws




* Attach angle irons to base with #9 x 5/8" Pan Head Screws

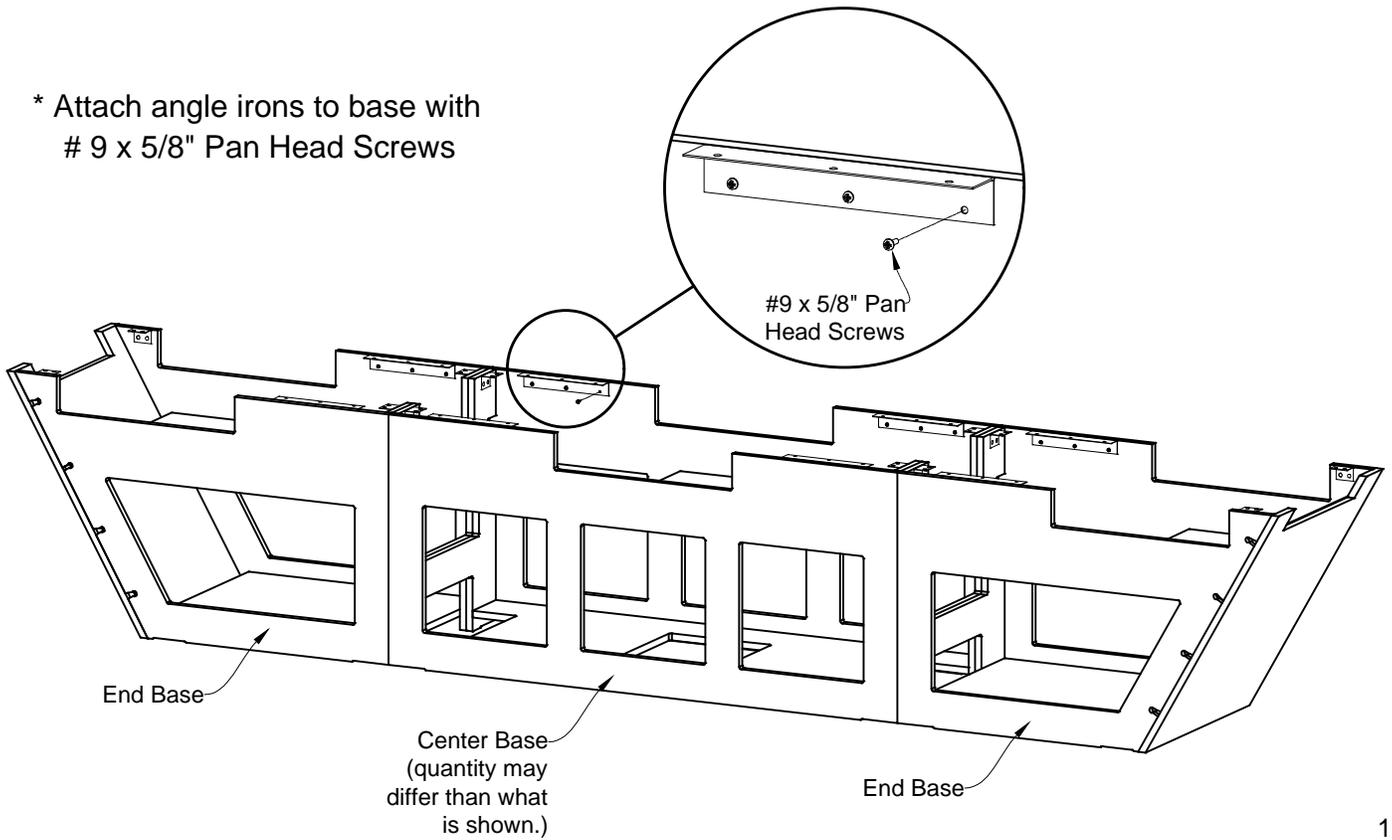

POWER DRAWER INSTALLATION




* Skip to page 3 for tables with no power drawers.

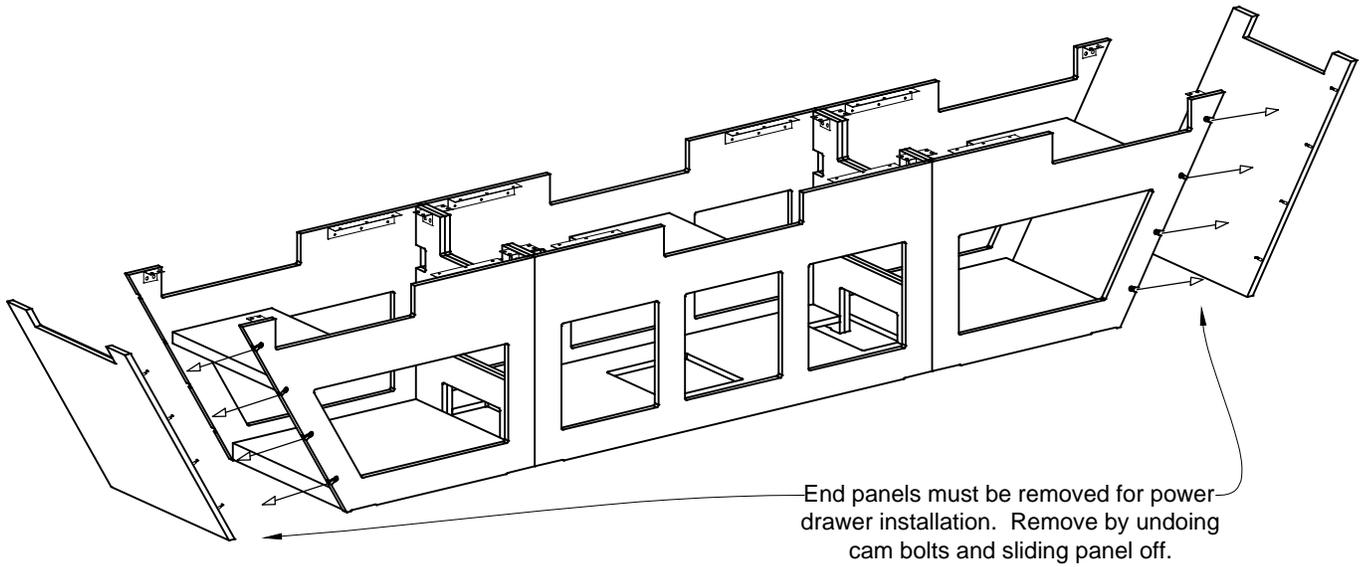

End panels must be removed for power drawer installation. Remove by undoing cam bolts and sliding panel off.

* Power drawers are labeled for location. Place drawers in correct location and attach drawer cable chains to support shelving using #9 x 5/8 Pan Head Screws.

* Table should be wired once cables are attached to support shelves for full access to run wires.

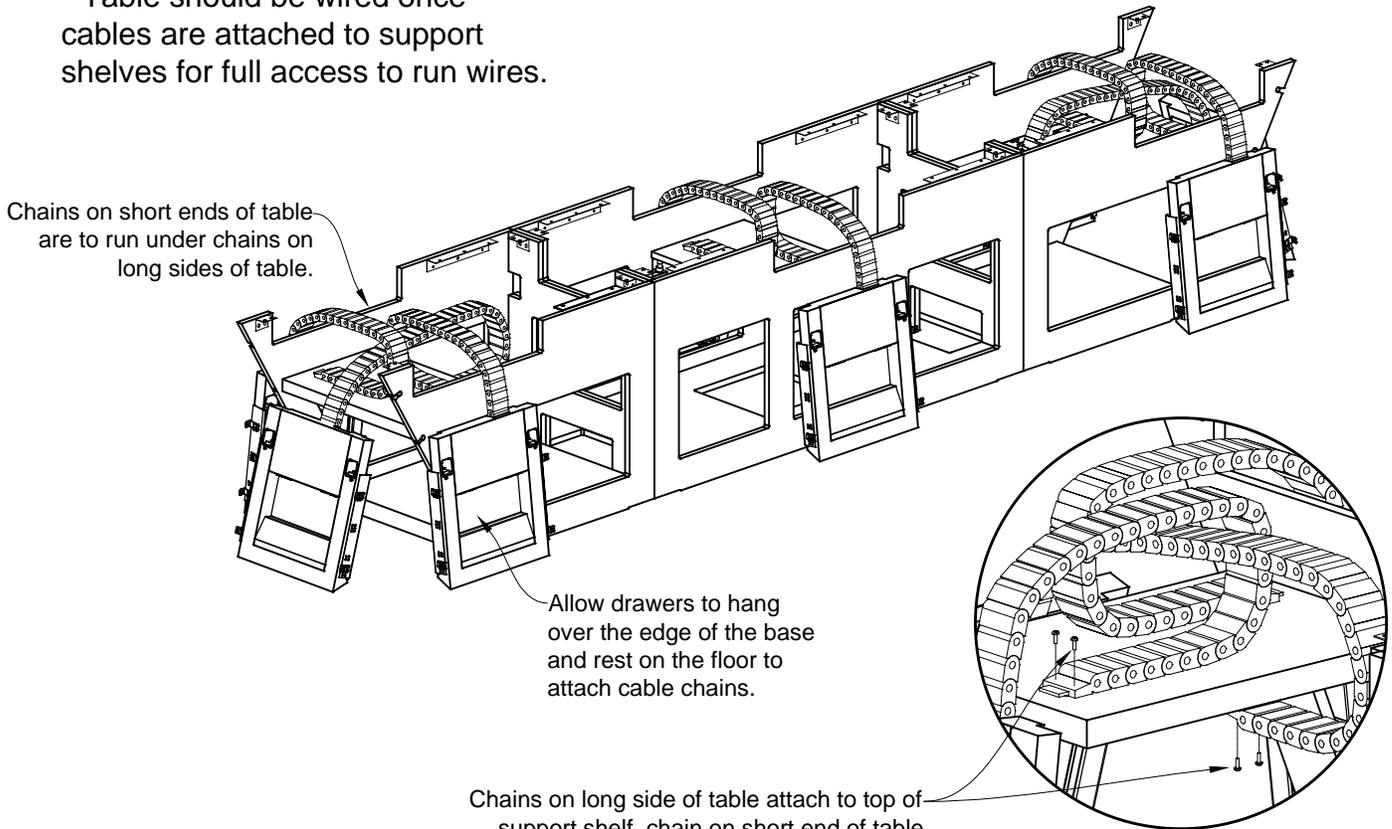

Chains on short ends of table are to run under chains on long sides of table.



Allow drawers to hang over the edge of the base and rest on the floor to attach cable chains.

Chains on long side of table attach to top of support shelf, chain on short end of table attaches to underside of support shelf. Attach using #9 x 5/8 Pan Head Screws.


SUBTOP ATTACHMENT





- * Place subtop onto base assembly and join together using field joints (see details A and B)
- * Screw subtop to base using #9 x 5/8" Pan Head Screws.

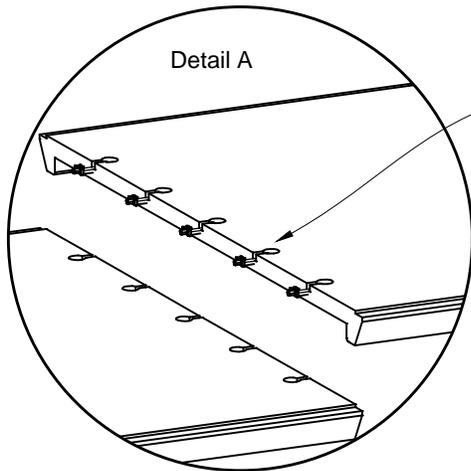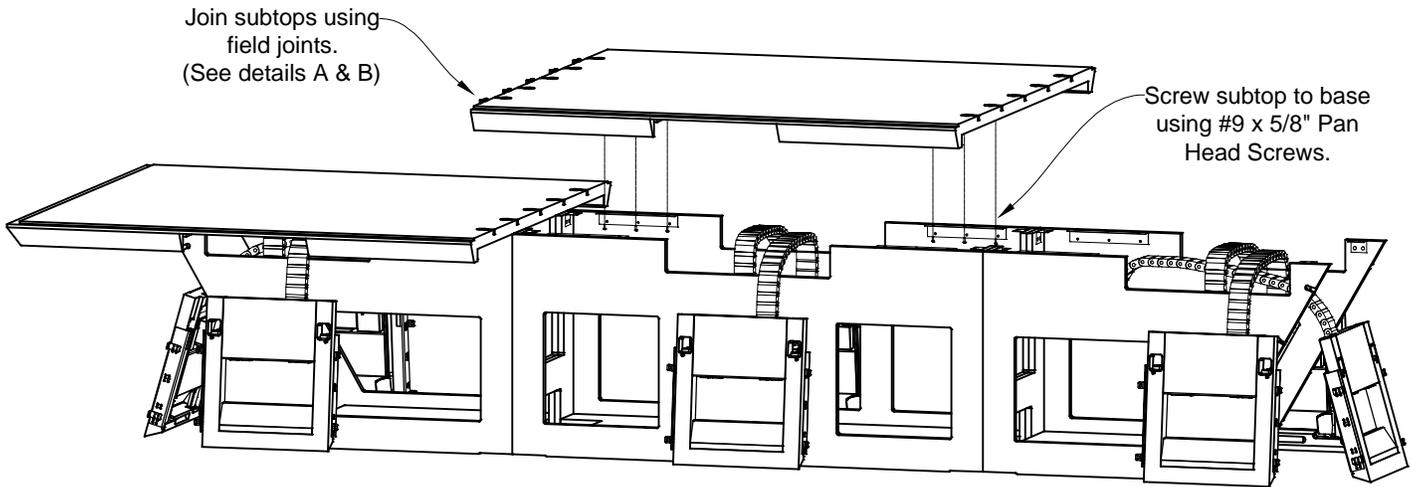


Field Joints

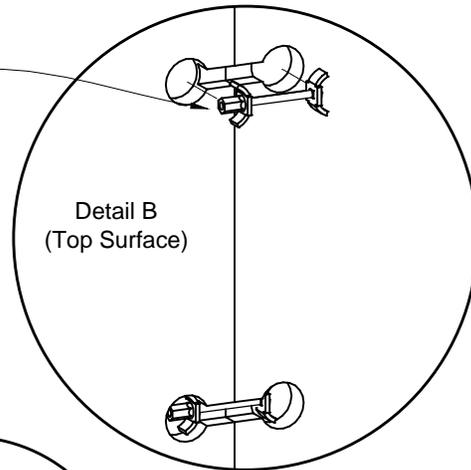

Attach drawer to subtop screwing through angle bracket into subtop using #9 x 5/8" Pan Head Screws

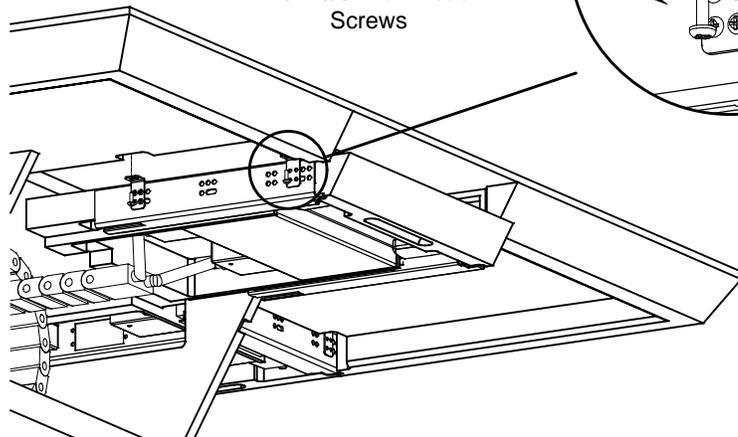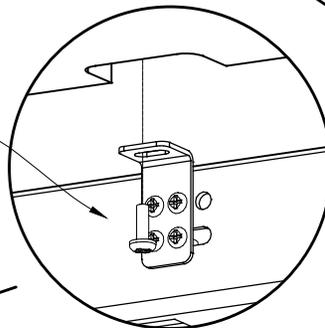


3/8" gap above drawer.

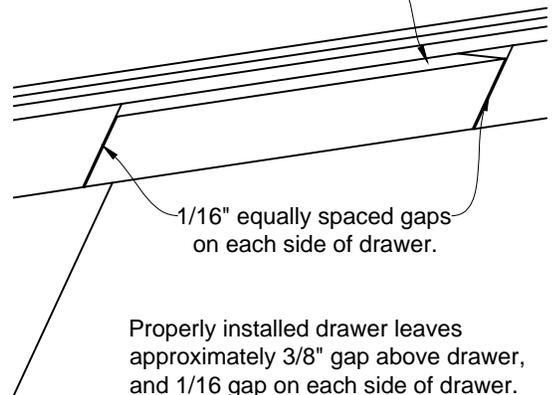

TOP TRIM ATTACHMENT




- * Trim and subtop are labeled to allow trim to fit properly. Place trim in correct location matching the labels and screw into subtop using #6 x 5/8 Flat Head Screws.

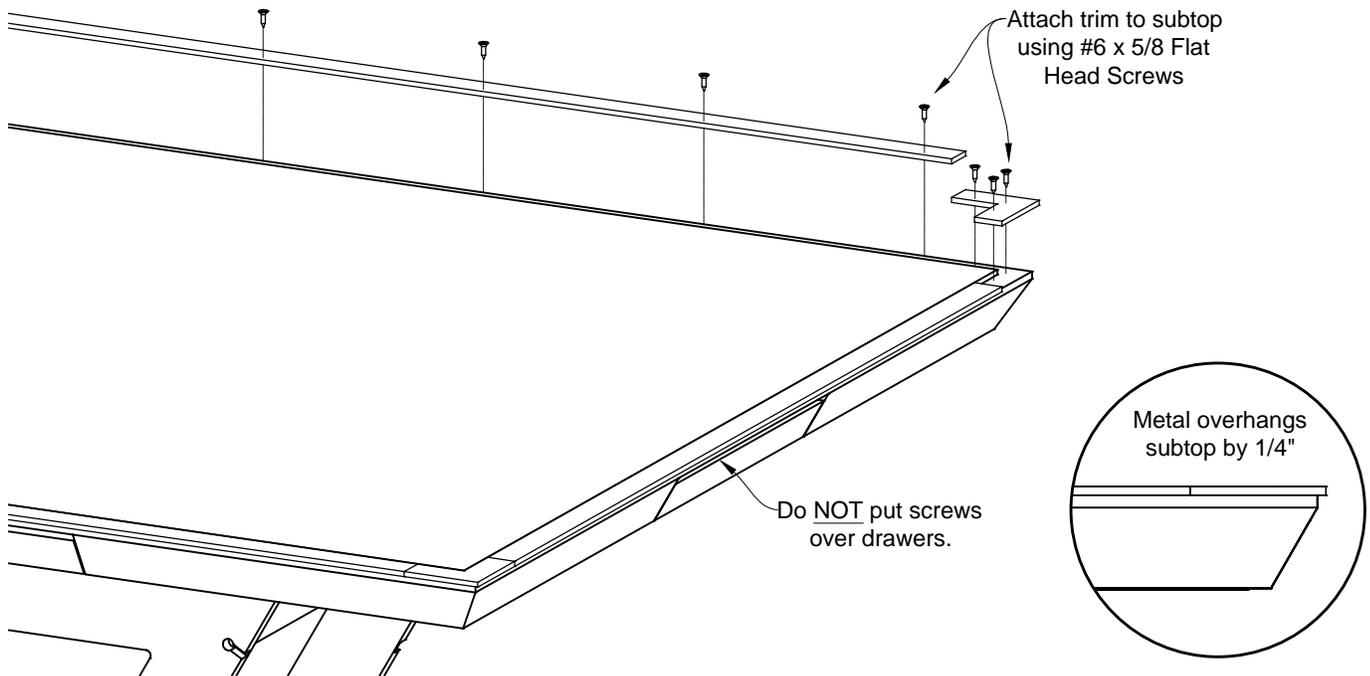

TOP ATTACHMENT

- * Veneer and Laminate Fenix tops: Screw up through subtop using # 10 x 2" Flat Head Screws.
- * Glass, Stone, and Avonite tops attach to subtop using silicone adhesive.

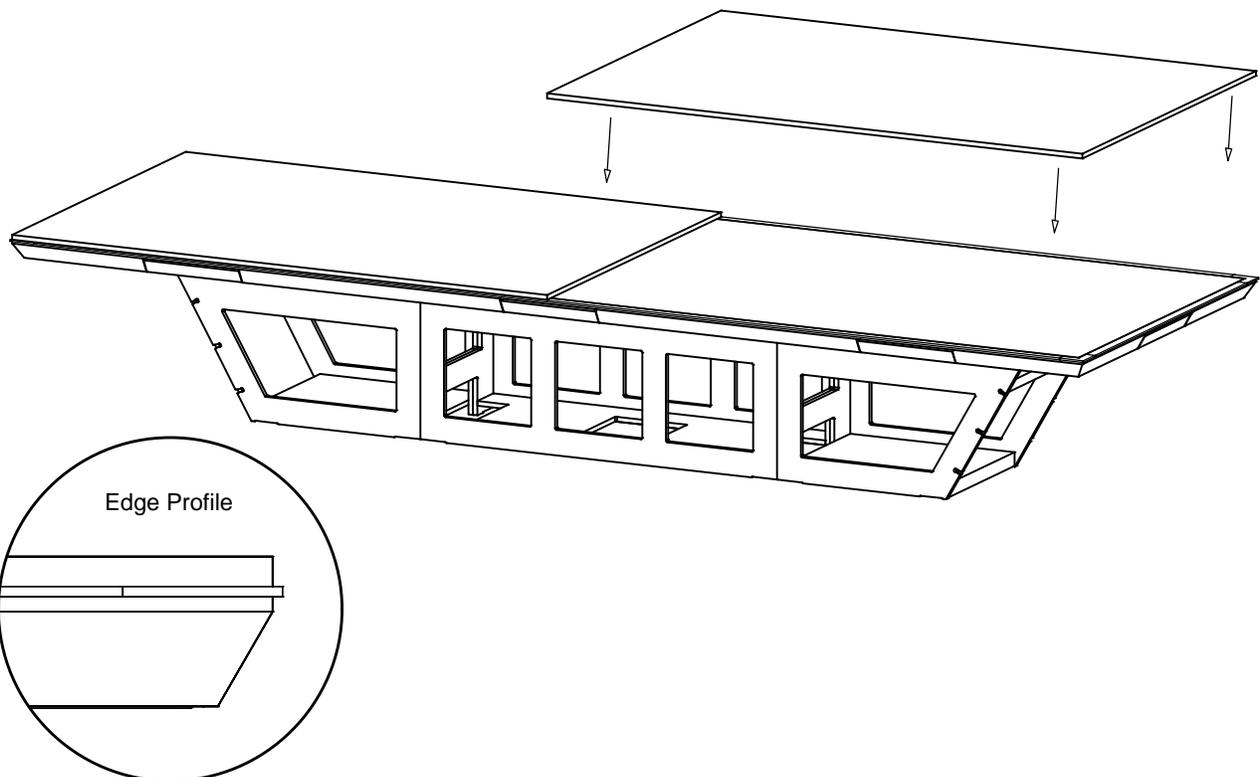

PANEL ATTACHMENT

* Re-attach end panels prior to installing side panels

